

SUPPLEMENTARY MANUAL

for GPDS-HO1

REMOVE THE MAIN SEAT.



REMOVE THE BLACK SIDE COVERS
FROM FUEL TANK COVER.
REMOVE THE FUEL TANK COVER.




REMOVE THE RAM-AIR COVERS. REMOVE THE FUEL TANK COVER.





LIFT UP OR REMOVE THE FUEL TANK.

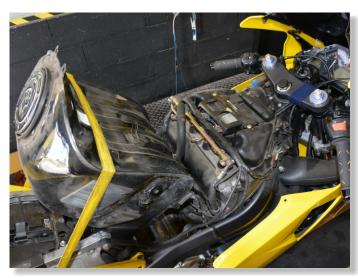

CONNECT DS-SERIES CONNECTOR
TO

DIAGNOSTIC SYSTEM CONNECTOR.

(RED, 4-POLE CONNECTOR WITH RED CAP UNDER MAIN SEAT NEAR POSITIVE SIDE OF BATTERY)



TYPICAL POSITION FOR THE GEAR INDICATOR.

