

SUPPLEMENTARY MANUAL

for GPX-HO3

REMOVE THE LEFT SIDE FAIRING.

REMOVE FRAME COVER

UNDER SEAT AT LEFT SIDE.



ROUTE THE GPX CABLE THROUGH


THE TOP OPENING OF THE

DUST BOOT.

LOCATE THE SPEED SENSOR


CONNECTORS IN DUST BOOT.

(TRANSPARENT, 3-POLE CONNECTORS AND WHITE/RED-WHITE/GREEN, 1-POLE CONNECTORS)

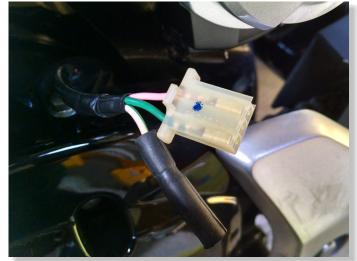

PLUG GPX CONNECTORS IN-LINE
WITH THE SPEED SENSOR
CONNECTORS.

(TRANSPARENT, 3-POLE CONNECTORS AND WHITE/RED-WHITE/GREEN, 1-POLE CONNECTORS IN DUST BOOT AT THE LEFT SIDE)

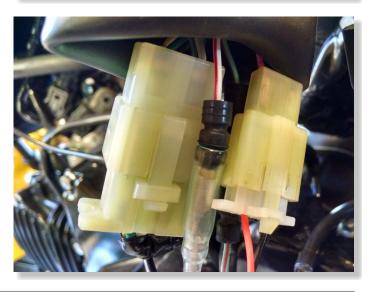




CONNECT GPX BLACK/GREEN WIRE

TO

YELLOW/GREEN WIRE OF

ECU/ECM CONNECTOR.

(BLACK CONNECTOR ON LEFT SIDE)

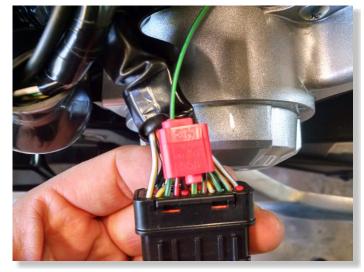

TYPICAL POSITION FOR THE GEAR INDICATOR.

