

# Yamaha FZ-8 ABS

2010-2011




## SUPPLEMENTARY MANUAL

for GPX-U01

REMOVE THE MAIN SEAT.  
REMOVE THE FUEL TANK.



REMOVE THE AIRBOX.  
ECU/ECM LOCATED BELOW  
THE AIRBOX.

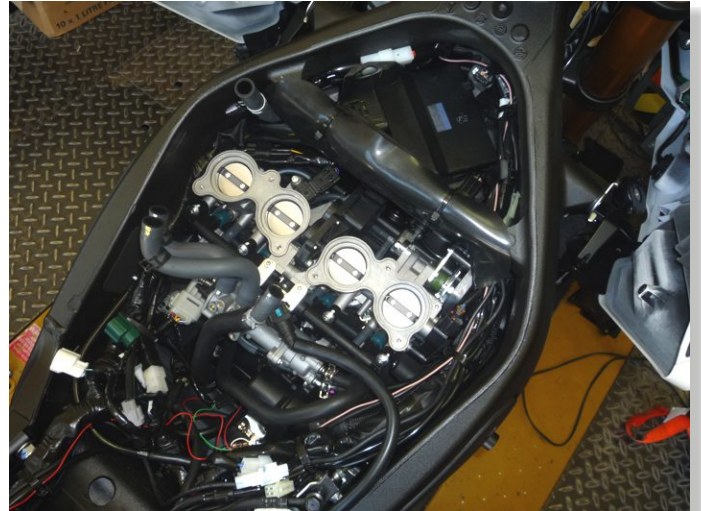

CONNECT THE GPX WIRES TO  
THE ECU/ECM WIRES.

CONNECT GPX WHITE WIRE TO  
WHITE/YELLOW WIRE OF ECU/ECM.


(BIG CONNECTOR, PIN #23)

CONNECT GPX GREEN WIRE TO  
GRAY WIRE OF ECU/ECM.

(SMALL CONNECTOR, PIN #5)

CONNECT GPX RED WIRE TO  
RED/WHITE OF ECU/ECM.

(SMALL CONNECTOR, PIN #9)

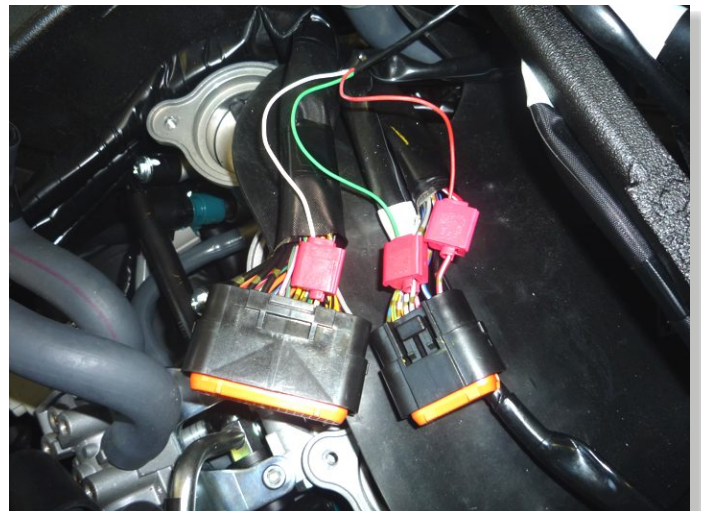

# Yamaha FZ-8 ABS

2010-201



CONNECT THE GPX BLACK WIRE  
TO THE STOCK GROUND LOCATION  
NEAR THE TOP SHOCK MOUNT.



TYPICAL POSITION FOR THE  
GEAR INDICATOR.

