

## SUPPLEMENTARY MANUAL

for GPXT + GPX-WSS

SECURE THE BIKE ON A STAND.



REMOVE THE SEAT AND THE SIDE FAIRINGS.



REMOVE THE FUEL TANK.





## SUPPLEMENTARY MANUAL

for GPXT + GPX-WSS

## MOUNT THE WHEEL SPEED SENSOR AT THE REAR WHEEL.

(ANY ROTATING METAL TARGETS WILL WORK, BUT THE TARGETS MUST BE SPACED AT EQUAL DISTANCES.
ADJUST AND TIGHTEN THE SENSOR SO THAT THE TIP OF THE SENSOR WILL BE IN-LINE WITH THE CENTER OF THE TARGET. THE AIR-GAP SHOULD BE ABOUT 1 MM.)



CONNECT GPX BLACK WIRE TO THE ELECTRIC STARTER BUTTON CONNECTOR BROWN WIRE.



CONNECT GPX RED WIRE TO THE FI WARNING LAMP CONNECTOR ORANGE WIRE.





## SUPPLEMENTARY MANUAL

for GPXT + GPX-WSS

CONNECT THE GPX BLACK/ GREEN WIRE TO THE YELLOW/WHITE WIRE OF THE CRANKSHAFT POSITION SENSOR CONNECTOR.

(BLUE, 2-POLE CONNECTOR BELOW THE SEAT ON THE LEFT SIDE.)



CONNECT THE 3-POLE SENSOR CONNECTOR TO THE GPX WIRING HARNESS CONNECTOR AND COIL UP THE EXCESS LENGTH.



TYPICAL POSITION FOR THE GEAR INDICATOR.

(SHOWN WITH THE OPTIONAL GIPRO MOUNT, PART NO.: GIPRO-M-BK.)

