


SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P4A


REMOVE THE FRAME COVERS BELOW MAIN SEAT.

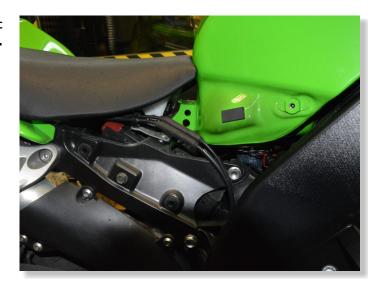

REMOVE THE MAIN SEAT.



REMOVE THE STEERING DAMPER HOLDER.

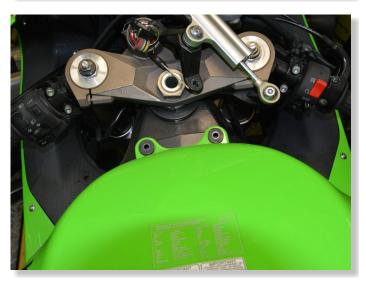



REMOVE THE FUEL TANK.



REMOVE THE AIRBOX.




PLUG QSH CONNECTORS IN-LINE
WITH THE IGNITION COIL
CONNECTORS.

(BLACK, Z-POLE CONNECTORS BELOW AIRBOX)



CONNECT QSH BLACK WIRE TERMINAL TO CHASSIS GROUND.

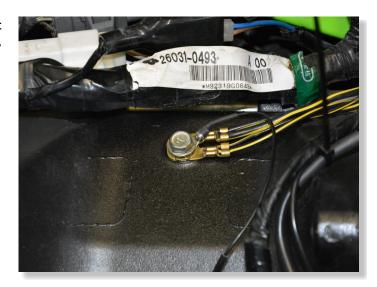

MOUNT THE QSE SENSOR.

(USE THE NEW BOLT AND WASHERS SUPPLIED WITH THE UNIT, MAKE SURE TO PLACE ONE WASHER ABOVE THE SENSOR AND ONE WASHER BELOW THE SENSOR.

TIGHTEN THE SCREW BY 7-10 NM.

WHEN TIGHTENED, DO NOT TRY TO ROTATE THE SENSOR BODY.)



Typical position for the QuickShifter easy.

