

## SUPPLEMENTARY MANUAL

for STVE-07

LOCATE THE THROTTLE BODY ASSEMBLY UNDER THE FUEL TANK.

FIND THE TWO CONNECTORS OF THE ACTUATOR MOTOR AND THE STPS (SECONDARY THROTTLE POSITION SENSOR) ON THE THROTTLE BODY ASSEMBLY.



UNPLUG THE TWO CONNECTORS.

REMOVE THE BUTTERFLY VALVE FLAPS/THROTTLE PLATES.



PLUG THE STVE MODULE INTO THE WIRING HARNESS CONNECTORS.







## SUPPLEMENTARY MANUAL

for STVE-07

TYPICAL POSITION FOR THE STVE.

SECURE THE WIRING WITH THE SUPPLIED CABLE TIE.

