

SUPPLEMENTARY MANUAL

for XT-SO1


REMOVE THE SEAT.



REMOVE THE SIDE COVERS FROM FUEL TANK.



REMOVE THE FUEL TANK.

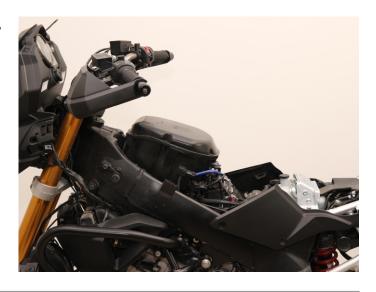

Suzuki DL1000 V-Strom

SUPPLEMENTARY MANUAL

for XT-SO1

PLUG THE X-TRE CONNECTORS IN-LINE WITH THE GEAR POSITION SENSOR CONNECTORS.

(WHITE, 3-POLE TRIANGULAR CONNECTORS BELOW THE FUEL TANK AT THE RIGHT SIDE)



MOUNT THE X-TRE BOX TO THE INNER SIDE OF THE SIDE FAIRING BY THE SUPPLIED VELCRO STRIPS, AND SECURE THE BOX AND CABLES WITH CABLE TIES.



CUT THE BLACK/GREEN WIRE ABOUT 4CM (1.6") AWAY FROM THE ECM CONNECTOR.

(BLACK CONNECTOR, PIN #6)

CONNECT THE X-TRE BLACK/GREEN WIRE TO BLACK/GREEN WIRE END, WHICH GOES TO THE ECU/ECM CONNECTOR.



SUPPLEMENTARY MANUAL

for XT-SO1

CONNECT THE X-TRE BLACK/WHITE WIRE TO BLACK/GREEN WIRE END, WHICH IS AT THE WIRING HARNESS SIDE.



CONNECT THE X-TRE RED WIRE

TO THE ORANGE WIRE OF

THE REAR BRAKE LIGHT SWITCH

CONNECTOR.

(TRANSPARENT, Z-POLE CONNECTOR BELOW THE SEAT)

(X-TRE MODE: 4)

