

SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4A

REMOVE THE BLACK FRAME COVERS BELOW FUEL TANK.

REMOVE THE MAIN SEAT.



REMOVE OR LIFT UP THE FUEL TANK.



REMOVE THE AIRBOX.





SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4A

PLUG QSH CONNECTORS IN-LINE
WITH THE IGNITION COIL
CONNECTORS.

(BLACK, 2-POLE CONNECTORS BELOW AIRBOX)



CONNECT QSH BLACK WIRE TERMINAL TO THE BATTERY NEGATIVE TERMINAL.



Mount the $\ensuremath{\mathsf{QSE}}$ sensor.

(REPLACE THE BOLT WITH THE ONE SUPPLIED.
TIGHTEN THE BOLT IN THIS POSITION BY
ABOUT 5-6 NM.
IF YOU DO NOT HAVE A TORQUE WRENCH,
TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.
FOR DIFFERENT MOUNTING OPTIONS,
REFER TO THE SENSOR INSTALL GUIDE.)







SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4A

Typical position for the QuickShifter easy.

SECURE THE MODULE PROPERLY.

