

## SUPPLEMENTARY MANUAL

for GPDS-HO1

REMOVE THE MAIN AND PASSENGER SEATS.



REMOVE THE LEFT OR RIGHT BLACK FRAME COVER BELOW THE FUEL TANK.



REMOVE THE LEFT OR RIGHT FAIRING.





## CONNECT DS-SERIES CONNECTOR TO

## DIAGNOSTIC SYSTEM CONNECTOR.

(RED, 4-POLE CONNECTOR WITH RED CAP AT THE RIGHT SIDE BELOW MAIN SEAT)



TYPICAL POSITION FOR THE GEAR INDICATOR.

