

## SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P1A

REMOVE THE MAIN SEAT.



REMOVE OR LIFT UP THE FUEL TANK.



LOCATE THE IGNITION COIL CONNECTOR ON THE RIGHT SIDE BELOW THE FUEL TANK.

(BLACK, 3-POLE CONNECTORS)





## SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P1A

CONNECT THE QSH CONNECTORS IN-LINE WITH THE IGNITION COIL CONNECTORS.



CONNECT THE QSH BLACK WIRE TERMINAL TO THE BATTERY NEGATIVE.



## MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED.
PLACE THE CONICAL WASHERS AT THE TWO SIDES OF
THE SENSOR LIKE THIS: (0). TIGHTEN THE BOLT IN
THIS POSITION BY ABOUT 5-6 NM.

IF YOU DO NOT HAVE A TORQUE WRENCH,
TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.
WHEN TIGHTENED, DO NOT TRY TO ROTATE THE
SENSOR BODY.

FOR DIFFERENT MOUNTING OPTIONS, REFER TO THE SENSOR INSTALL GUIDE.)







## SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P1A

TYPICAL POSITION FOR THE QUICKSHIFTER EASY.

SECURE THE UNIT PROPERLY.

