

SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P2E

REMOVE THE LEFT SIDE FAIRING.



CONNECT QSH CONNECTORS IN-LINE WITH THE IGNITION COIL CONNECTOR OF FRONT CYLINDER.

(LEFT SIDE, BLACK, 3-POLE CONNECTOR)




CONNECT QSH CONNECTORS IN-LINE WITH THE IGNITION COIL CONNECTOR OF REAR CYLINDER.

(LEFT SIDE, BLACK, 3-POLE CONNECTOR)





INSERT THE SPACER (SUPPLIED)
INTO THE HOLE ON SHIFT ARM.

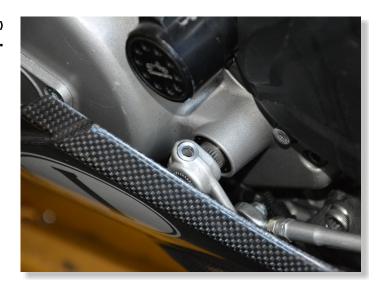

MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED.
PLACE THE CONICAL WASHERS AT THE TWO SIDES OF
THE SENSOR LIKE THIS: (D). TIGHTEN THE BOLT IN
THIS POSITION BY ABOUT 5 NM. IF YOU DO NOT HAVE
A TORQUE WRENCH, TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.

FOR DIFFERENT MOUNTING OPTIONS, REFER TO THE SENSOR INSTALL GUIDE.)



Typical position for the QuickShifter easy.

