

Kawasaki ZX-6R Ninja

2009-2012




SUPPLEMENTARY MANUAL

for STVE-08

REMOVE THE FUEL TANK.



REMOVE THE AIRBOX.

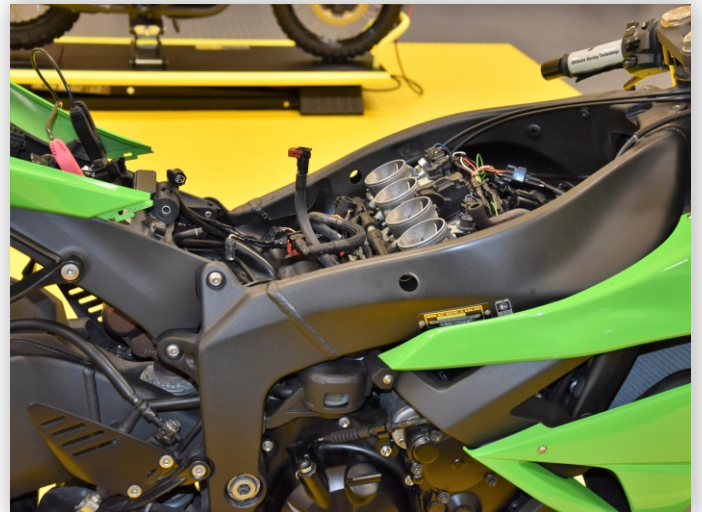

LOCATE THE THROTTLE BODY
ASSEMBLY UNDER THE AIRBOX.

FIND AND UNPLUG THE TWO
CONNECTORS OF THE ACTUATOR
MOTOR AND THE STPS
(SECONDARY THROTTLE POSITION
SENSOR) ON THE THROTTLE BODY
ASSEMBLY.

REMOVE THE BUTTERFLY VALVE
FLAPS/THROTTLE PLATES.



Kawasaki ZX-6R Ninja

2009-2012




SUPPLEMENTARY MANUAL

for STVE-08

PLUG THE STVE
MODULE INTO THE 4-POLE BLACK
WIRING HARNESS CONNECTOR.



PLUG THE STVE
MODULE INTO THE 3-POLE GRAY
WIRING HARNESS CONNECTOR.

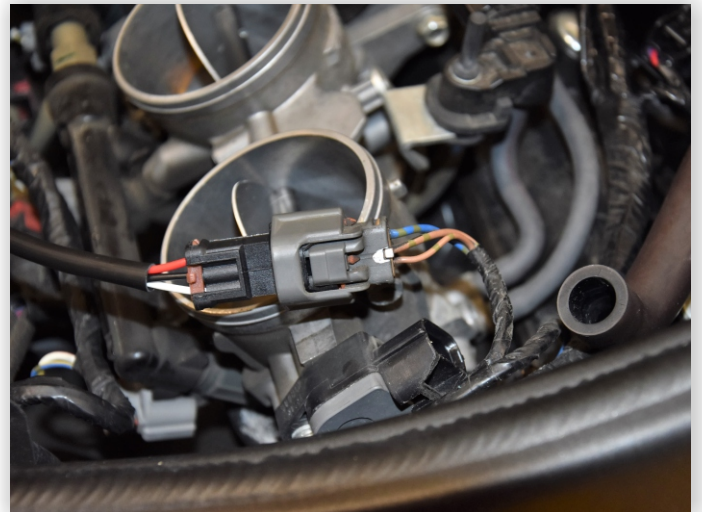

TYPICAL POSITION FOR THE STVE.

SECURE THE WIRING WITH THE
SUPPLIED CABLE TIE.

