## SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P2A

REMOVE THE MAIN SEAT.
REMOVE THE FUEL TANK COVER ON
RIGHT SIDE.



## PLUG QSH CONNECTORS IN-LINE WITH THE IGNITION COIL CONNECTORS.

(BLACK, Z-POLE CONNECTORS BELOW FUEL TANK)



## MOUNT THE QSE SENSOR.

(USE THE NEW BOLT AND WASHERS SUPPLIED WITH THE UNIT. MAKE SURE TO PLACE ONE WASHER ABOVE THE SENSOR AND ONE WASHER BELOW THE SENSOR. TIGHTEN THE SCREW BY  $7-10\,$  Nm.

WHEN TIGHTENED, DO NOT TRY TO ROTATE THE SENSOR BODY)





CONNECT QSH BLACK WIRE TERMINAL TO CHASSIS GROUND.



Typical position for the QuickShifter easy.

