

SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P4A

REMOVE THE MAIN SEAT.
REMOVE THE BLACK FUEL TANK
COVERS FROM BOTH SIDES.
REMOVE THE FRONT FUEL
TANK COVER.
REMOVE THE FUEL TANK.



REMOVE THE AIRBOX.



REMOVE THE TRAPEZOID BLACK FRAME COVER BELOW AIRBOX.






PLUG QSH CONNECTORS IN-LINE WITH THE IGNITION COIL CONNECTORS.

(BLACK, 2-POLE CONNECTORS BELOW AIRBOX)



CONNECT QSH BLACK WIRE TERMINAL TO CHASSIS GROUND.

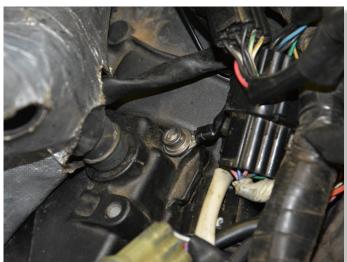

Mount the QSE sensor.

(USE THE NEW BOLT AND WASHERS SUPPLIED WITH THE UNIT. MAKE SURE TO PLACE ONE WASHER ABOVE THE SENSOR AND ONE WASHER BELOW THE SENSOR.

TIGHTEN THE SCREW BY 3-4 NM.

WHEN TIGHTENED, DO NOT TRY TO ROTATE THE SENSOR BODY.)









Typical position for the QuickShifter Easy.

