

Kawasaki ZX-6RR


2005-2006




SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P4A

REMOVE THE BLACK FRAME
COVERS BELOW MAIN SEAT.

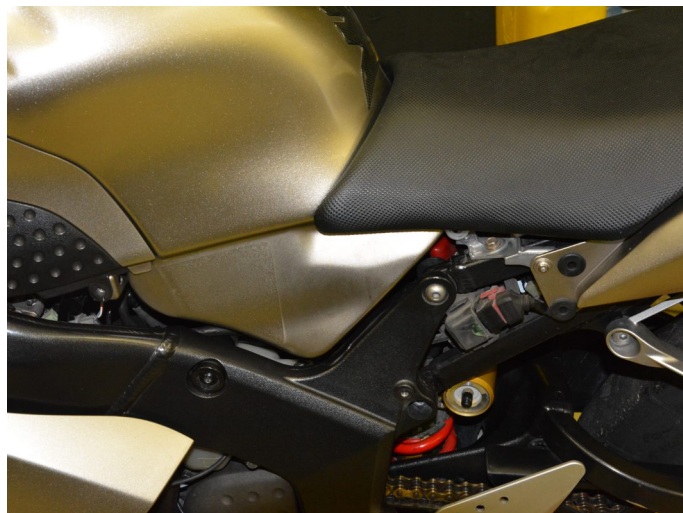

REMOVE THE MAIN SEAT.

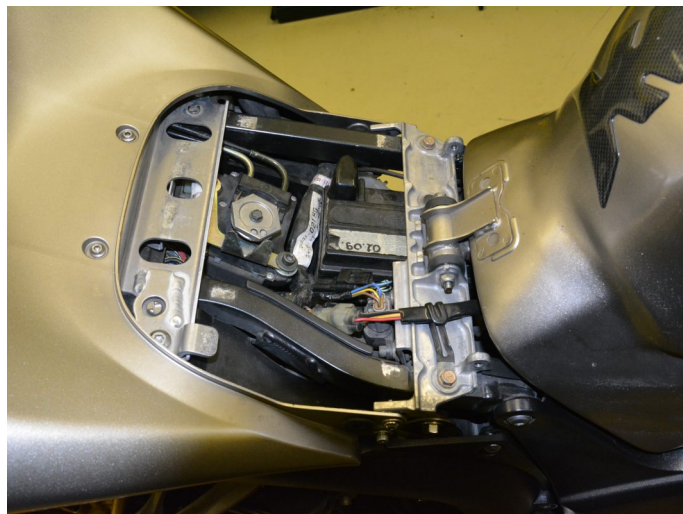

REMOVE THE FUEL TANK.




Kawasaki ZX-6RR


2005-2006



REMOVE THE AIRBOX.

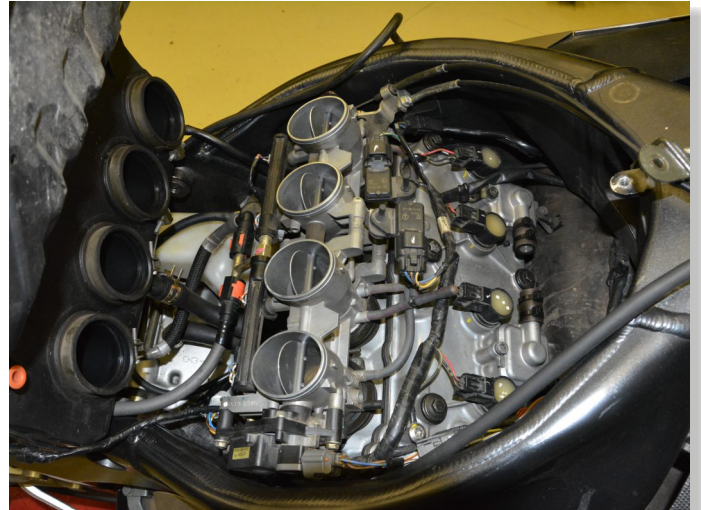

**PLUG QSH CONNECTORS IN-LINE
WITH THE IGNITION COIL
CONNECTORS.**
(BLACK, 2-POLE CONNECTORS BELOW AIRBOX)

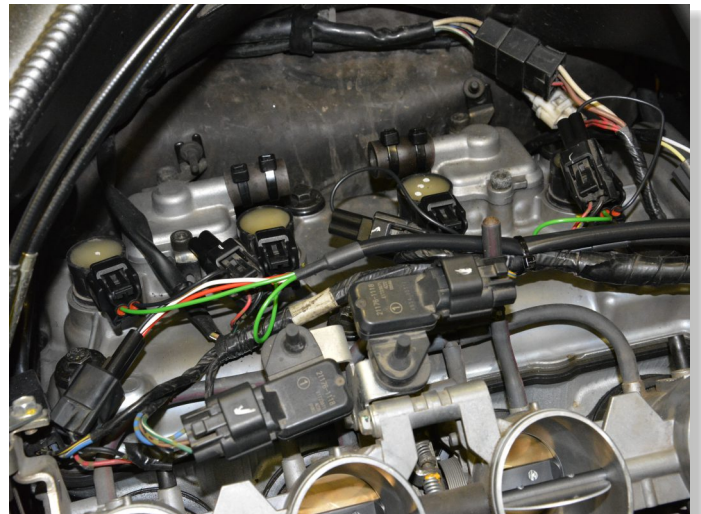

**CONNECT QSH BLACK WIRE
TERMINAL TO CHASSIS GROUND.**



Kawasaki ZX-6RR

2005-2006



MOUNT THE QSE SENSOR.

(USE THE NEW BOLT AND WASHERS SUPPLIED WITH THE UNIT. MAKE SURE TO PLACE ONE WASHER ABOVE THE SENSOR AND ONE WASHER BELOW THE SENSOR. TIGHTEN THE SCREW BY 7-10 NM.

WHEN TIGHTENED, DO NOT TRY TO ROTATE THE SENSOR BODY.)



TYPICAL POSITION FOR THE QUICKSHIFTER EASY.

