

SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P4B

REMOVE THE MAIN SEAT.



REMOVE THE BLACK SIDE COVERS.
REMOVE THE FUEL TANK COVER.



REMOVE THE FUEL TANK.






REMOVE THE AIRBOX.




REMOVE THE AIR INTAKE BELOW THE AIRBOX.

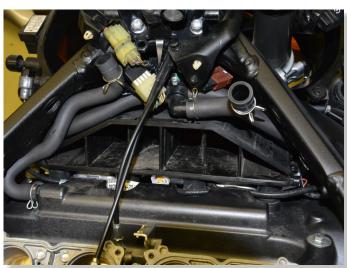

PLUG QSH CONNECTORS IN-LINE
WITH THE IGNITION COIL
CONNECTORS.

(BLACK, Z-POLE CONNECTORS BELOW AIR INTAKE)

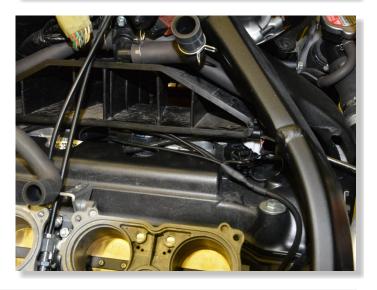



CONNECT QSH BLACK WIRE TERMINAL TO CHASSIS GROUND.



MOUNT THE QSE SENSOR.

(Use the New Bolt and Washers Supplied With the Unit. Make sure to place one Washer above the sensor and one Washer below the sensor. Tighten the screw by 7-10 Nm.

WHEN TIGHTENED, DO NOT TRY TO ROTATE THE SENSOR BODY.)



Typical position for the QuickShifter Easy.

