

SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P4B

REMOVE THE MAIN AND PASSANGER SEAT.



REMOVE THE REAR FAIRING FROM LEFT SIDE.



REMOVE THE FUEL TANK.





REMOVE THE AIRBOX.



PLUG QSH CONNECTORS IN-LINE WITH THE IGNITION COIL CONNECTORS.

(BLACK, 2-POLE CONNECTORS BELOW AIRBOX)



CONNECT QSH BLACK WIRE TERMINAL TO CHASSIS GROUND.





MOUNT THE QSE SENSOR.

(Use the New Bolt and Washers Supplied With the Unit. Make sure to place one Washer above the sensor and one Washer below the sensor. Tighten the screw by 7-10 Nm.

WHEN TIGHTENED, DO NOT TRY TO ROTATE THE SENSOR BODY.)



TYPICAL POSITION FOR THE QUICKSHIFTER EASY.

