

Benelli TRK 502

2017-



SUPPLEMENTARY MANUAL

for SH-V4 + SH-U01

REMOVE THE SEATS.



REMOVE THE SIDE BLACK PLASTIC
COVERS.



UNPLUG THE ABS ECU
CONNECTOR.

(BLACK, 18 POLE CONNECTOR UNDER THE FUEL TANK,
NEXT TO THE ABS UNIT.)







SUPPLEMENTARY MANUAL

for SH-V4 + SH-U01


CUT THE BLUE/PURPLE WIRE ABOUT
4CM (1.5") AWAY FROM THE
CONNECTOR.

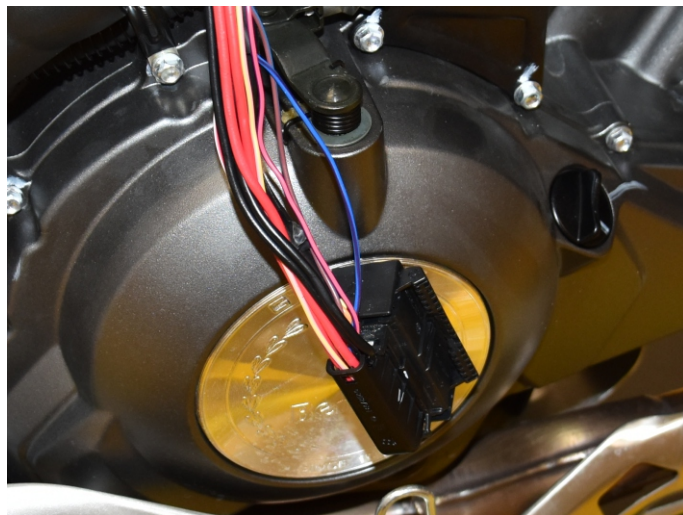

CONNECT THE
SPEEDOHEALER WHITE WIRE TO
THE BLUE/PURPLE WIRE END,
WHICH IS AT THE ABS CONNECTOR
SIDE.

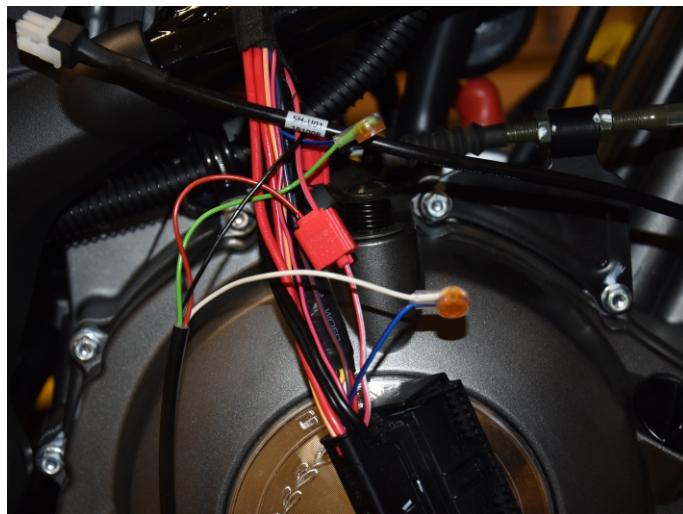

CONNECT THE
SPEEDOHEALER GREEN WIRE TO
THE BLUE/PURPLE WIRE END,
WHICH IS AT THE WIRING HARNESS
SIDE.

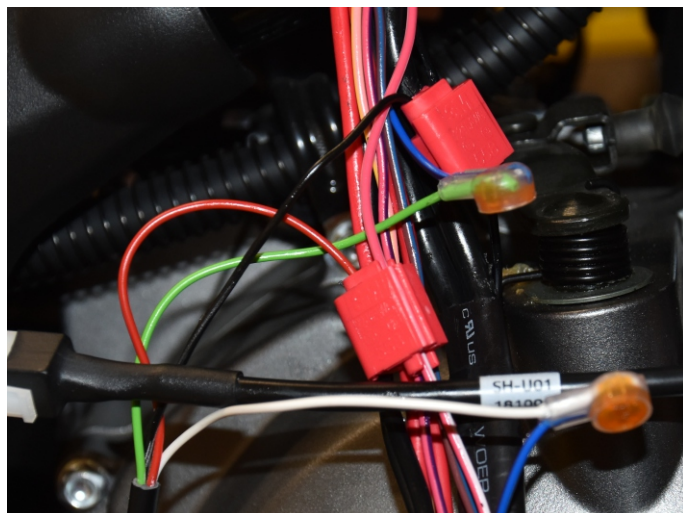

SPLICE THE
SPEEDOHEALER RED WIRE TO
THE PINK/WHITE WIRE.

SPLICE THE
SPEEDOHEALER BLACK WIRE TO
THE BLACK WIRE.

Benelli TRK 502

2017-



SUPPLEMENTARY MANUAL

for SH-V4 + SH-U01

RECOMMENDED POSITION
FOR SPEEDOHEALER.

SECURE THE UNIT PROPERLY.

