



## SUPPLEMENTARY MANUAL

for SH-V4 + SH-UO1

REMOVE THE SEAT.

REMOVE THE FAIRINGS AROUND THE FUEL TANK AND LOCATE THE ABS ECU CONNECTOR.

UNPLUG THE CONNECTOR.




CUT THE BLACK WIRE ABOUT 4CM (1.5") AWAY FROM THE ABS ECU CONNECTOR.

CONNECT THE SPEEDOHEALER WHITE WIRE TO THE BLACK WIRE END, WHICH GOES TO THE ABS ECU CONNECTOR.

CONNECT THE SPEEDOHEALER GREEN WIRE TO THE BLACK WIRE END, WHICH IS AT THE WIRING HARNESS SIDE.

SPLICE THE SPEEDOHEALER RED WIRE TO THE ORNAGE WIRE OF THE ABS ECU CONNECTOR.

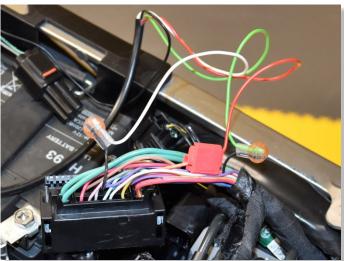








## SUPPLEMENTARY MANUAL

for SH-V4 + SH-UO1

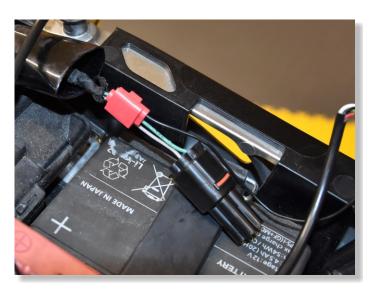

SPLICE THE SPEEDOHEALER BLACK WIRE TO THE GREEN WIRE OF THE OPTION CONNECTOR.

(BLACK, 4-POLE CONNECTOR UNDER THE SEAT, LEFT SIDE IN A DUST BOOT.)

RECOMMENDED POSITION FOR THE SPEEDOHEALER.

SECURE THE UNIT PROPERLY.

