Honda VFR800X Crossrunner

SUPPLEMENTARY MANUAL

for SH-UO1

REMOVE THE SEATS.
REMOVE THE FAIRINGS.



REMOVE THE FUEL TANK.



UNPLUG THE ABS ECU CONNECTOR.

(BLACK CONNECTOR BEHIND THE ABS UNIT)



Honda VFR800X Crossrunner

CUT THE PINK/GREEN WIRE ABOUT 4CM (1.5") AWAY FROM THE CONNECTOR.




SPLICE THE
SPEEDOHEALER WHITE WIRE TO
THE PINK/GREEN WIRE END,
WHICH GOES TO THE
ABS ECU CONNECTOR.

SPLICE THE
SPEEDOHEALER GREEN WIRE TO
THE PINK/GREEN WIRE END,
WHICH IS AT THE
WIRING HARNESS SIDE.



SPLICE THE SPEEDOHEALER RED WIRE TO THE ORANGE/BLUE WIRE.

SPLICE THE SPEEDOHEALER BLACK WIRE TO THE GREEN/ORANGE WIRE.

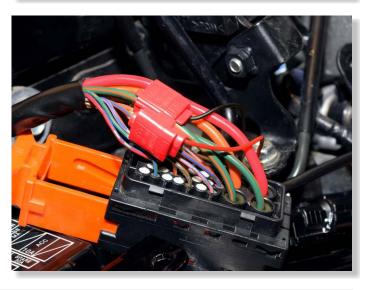



Honda VFR800X Crossrunner

TYPICAL POSITION FOR TSM SWITCH.



RECOMMENDED POSITION FOR SPEEDOHEALER.

