

# Yamaha MT-07/FZ-07

2014-



## SUPPLEMENTARY MANUAL

for SLP-U01


REMOVE THE HEADLIGHT ASSEMBLY.



REMOVE THE FAIRING AROUND THE  
FUEL TANK AND THE PLASTIC COVER  
ON THE RIGHT SIDE.



CONNECT THE SLP BLACK/GREEN  
WIRE TO THE GREY WIRE AT THE  
ECU CONNECTOR.

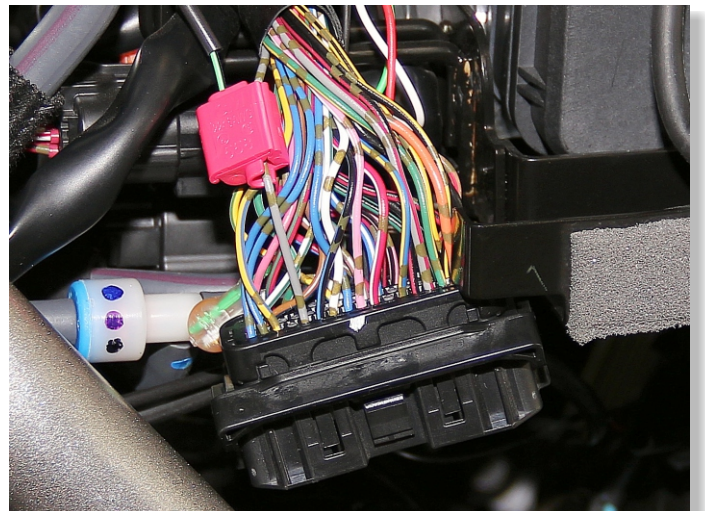

# Yamaha MT-07/FZ-07

2014-




## SUPPLEMENTARY MANUAL

for SLP-U01

LOCATE THE 2-POLE AUXILIARY  
LIGHT CONNECTOR BEHIND THE  
HEADLIGHT ASSEMBLY.

CONNECT THE SLP RED WIRE TO  
THE BLUE/RED WIRE OF THE  
AUXILIARY LIGHT CONNECTOR.

CONNECT THE SLP BLACK WIRE TO  
THE BLACK WIRE OF THE AUXILIARY  
LIGHT CONNECTOR.

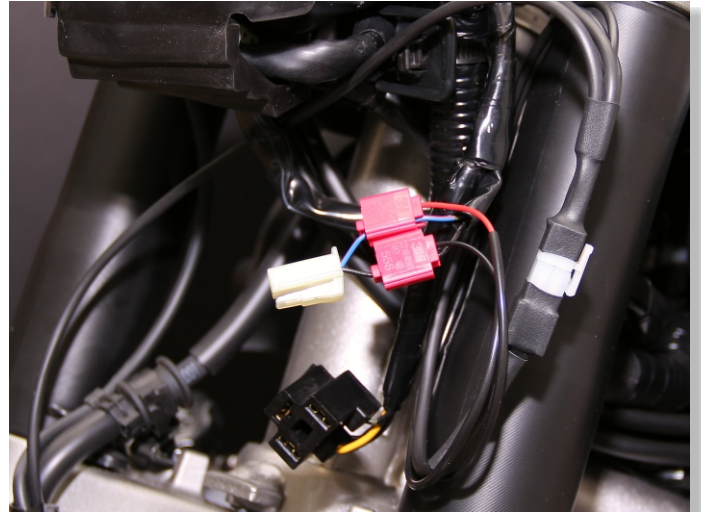

TYPICAL POSITION FOR THE  
SHIFT LIGHT.

SECURE THE UNIT PROPERLY.

