

## SUPPLEMENTARY MANUAL

for GPDS-D01

REMOVE THE MAIN SEAT. LIFT UP OR REMOVE THE FUEL TANK.



CONNECT DS-SERIES CONNECTOR
TO

DIAGNOSTIC SYSTEM CONNECTOR.

(BLACK, 4-POLE CONNECTOR WITH BLACK CAP BELOW MAIN SEAT



TYPICAL POSITION FOR THE GEAR INDICATOR.

