

SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P4B


REMOVE THE MAIN SEAT.



REMOVE THE BLACK SIDE COVERS FROM FUEL TANK COVER.




REMOVE THE RAM-AIR COVERS. REMOVE THE FUEL TANK COVER.

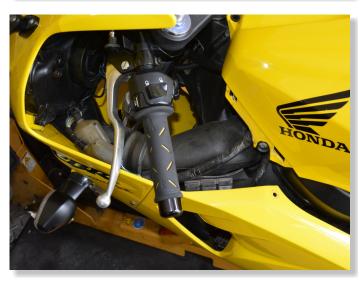




LIFT UP OR REMOVE THE FUEL TANK.

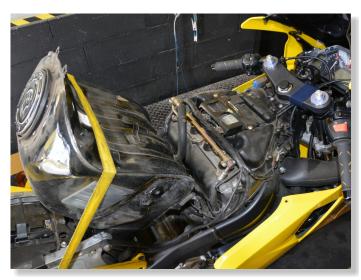

REMOVE THE AIRBOX.

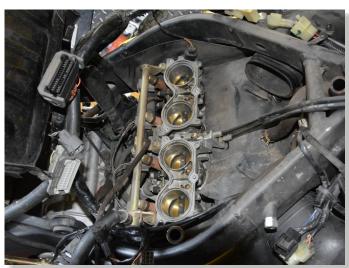


PLUG QSH CONNECTORS IN-LINE
WITH THE IGNITION COIL
CONNECTORS.

(BLACK, Z-POLE CONNECTORS ON TOP OF THE ENGINE)





CONNECT QSH BLACK WIRE TERMINAL TO CHASSIS GROUND.

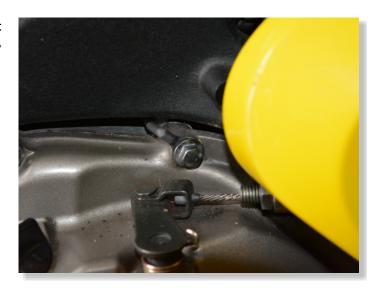

MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED.
PLACE THE CONICAL WASHERS AT THE TWO SIDES OF
THE SENSOR LIKE THIS: (D). TIGHTEN THE BOLT IN
THIS POSITION BY ABOUT 5 NM. IF YOU DO NOT HAVE
A TORQUE WRENCH, TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.

FOR DIFFERENT MOUNTING OPTIONS, REFER TO THE SENSOR INSTALL GUIDE.)



Typical position for the QuickShifter easy.

