




SUPPLEMENTARY MANUAL

for XT-S01

REMOVE THE MAIN SEAT.



REMOVE THE CHROME FUEL TANK
UPPER COVER.
REMOVE THE LEFT AND RIGHT
INDICATOR COVERS FROM
FUEL TANK.

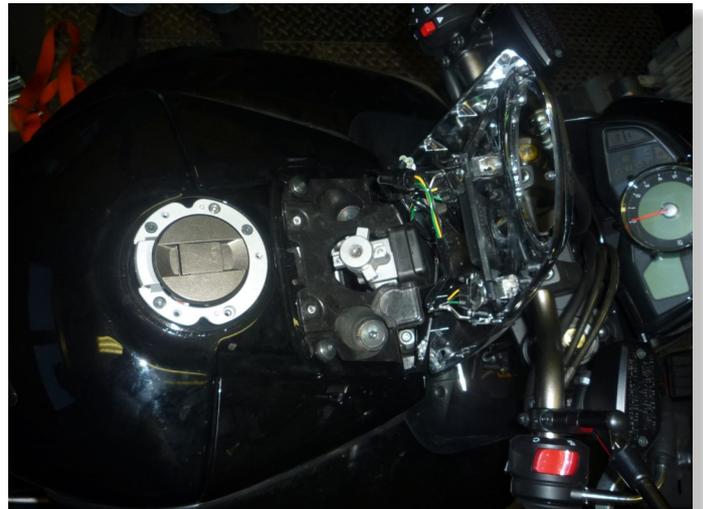

REMOVE THE LEFT AND RIGHT
BLACK FRAME COVERS
FROM FUEL TANK.
LIFT UP OR REMOVE THE
FUEL TANK.





PLUG X-TRE CONNECTORS IN-LINE WITH THE GEAR POSITION SENSOR CONNECTORS.

(WHITE, 3-POLE TRIANGULAR CONNECTORS BELOW THE FUEL TANK AT LEFT SIDE)

MOUNT THE XTRE BOX TO THE INNER SIDE OF THE FRAME BY THE SUPPLIED VELCRO STRIPS, AND SECURE THE BOX AND CABLES WITH CABLE TIES.



CUT THE BLACK/GREEN WIRE ABOUT 4CM (1.6") AWAY FROM THE ECM CONNECTOR.

(BLACK CONNECTOR, PIN #6)

CONNECT THE X-TRE BLACK/GREEN WIRE TO BLACK/GREEN WIRE END, WHICH GOES TO THE ECM CONNECTOR.

CONNECT THE X-TRE BLACK/WHITE WIRE TO BLACK/GREEN WIRE END, WHICH IS AT THE WIRING HARNESS SIDE.



CONNECT X-TRE RED WIRE TO ORANGE WIRE OF REAR BRAKE LIGHT SWITCH CONNECTOR.

(TRANSPARENT, 2-POLE CONNECTOR BELOW FUEL TANK)

(X-TRE MODE: 4)

