



## SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4H

REMOVE THE SEATS.



REMOVE THE  
FRAME COVERS AND SIDE FAIRINGS.



REMOVE THE  
FUEL TANK.





## SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4H

REMOVE THE AIRBOX.



CONNECT THE QSH CONNECTORS  
IN-LINE WITH THE IGNITION COIL  
CONNECTORS ON THE LEFT SIDE.  
(BLACK, 3-POLE CONNECTORS)



CONNECT THE QSH CONNECTORS  
IN-LINE WITH THE IGNITION COIL  
CONNECTORS ON THE RIGHT SIDE.  
(BLACK, 3-POLE CONNECTORS)





# SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4H

CONNECT THE QSH BLACK WIRE  
TERMINAL TO THE CHASSIS  
GROUND.



## MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED.  
PLACE THE CONICAL WASHERS AT THE TWO SIDES OF  
THE SENSOR LIKE THIS: (O). TIGHTEN THE BOLT IN  
THIS POSITION BY ABOUT 5-6 NM.

IF YOU DO NOT HAVE A TORQUE WRENCH,  
TIGHTEN THE BOLT UNTIL THE  
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.  
WHEN TIGHTENED, DO NOT TRY TO ROTATE THE  
SENSOR BODY.

FOR DIFFERENT MOUNTING OPTIONS,  
REFER TO THE SENSOR INSTALL GUIDE.)



## TYPICAL POSITION FOR THE QUICKSHIFTER EASY.

SECURE THE UNIT PROPERLY.

