



SUPPLEMENTARY MANUAL

for BLP-UO1

REMOVE THE PASSANGER SEAT.



REMOVE THE MAIN SEAT.

REMOVE THE LEFT SIDE REAR FAIRING.










LOCATE THE REAR LIGHT CONNECTOR UNDER LEFT SIDE REAR FAIRING. (WHITE, 3-POLE TRIANGULAR CONNECTOR)



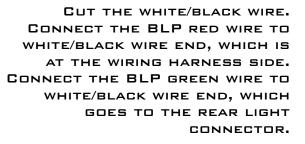





CONNECT THE BLP BLACK WIRE TO BLACK/WHITE WIRE OF REAR LIGHT CONNECTOR.







TYPICAL POSITION FOR BRAKE LIGHT PRO.

