

Suzuki M1800R Intruder

2006-2011



SUPPLEMENTARY MANUAL

for ESE-S01

REMOVE THE MAIN SEAT.



REMOVE THE FRAME COVER
BELOW MAIN SEAT
ON RIGHT SIDE.



REMOVE THE SWING ARM COVER
ON RIGHT SIDE.



Suzuki M1800R Intruder

2006-2011




UNPLUG EXHAUST SERVO-MOTOR CONNECTORS.

(BLACK, 3-POLE CONNECTOR AND
TRANSPARENT, 2-POLE CONNECTOR
BELOW SWING ARM COVER ON LEFT SIDE)

REMOVE THE EXHAUST SERVO-MOTOR.



PLUG ESE CONNECTORS TO EXHAUST SERVO-MOTOR CONNECTORS.

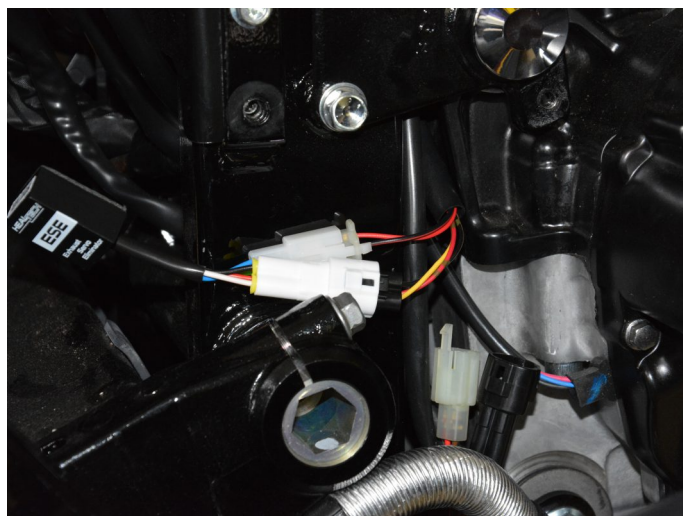

TYPICAL POSITION FOR EXHAUST SERVO ELIMINATOR.

