

Harley-Davidson Street 750

2014-



SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P1H

REMOVE THE SEATS AND THE SIDE
COVERS.



LIFT UP THE FUEL TANK.



LOCATE THE IGNITION COIL
CONNECTOR BETWEEN THE
CYLINDERS.







SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P1H

**CONNECT THE QSH CONNECTORS
IN-LINE WITH THE IGNITION COIL
CONNECTOR.**

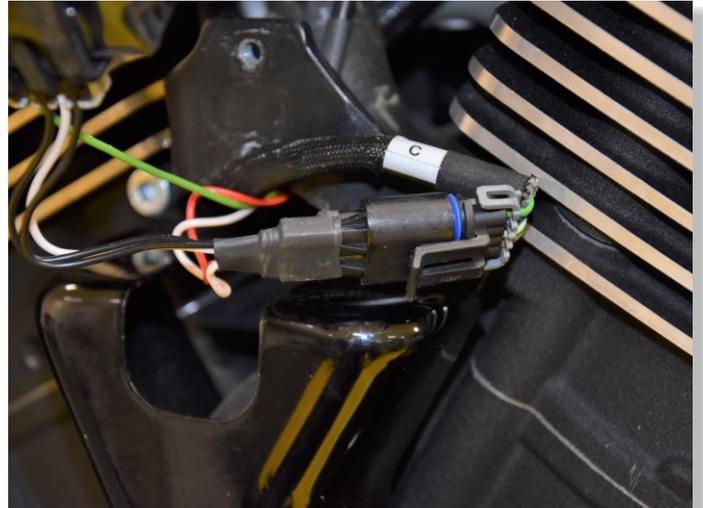


**CONNECT THE QSH BLACK WIRE
TERMINAL TO THE CHASSIS
GROUND.**

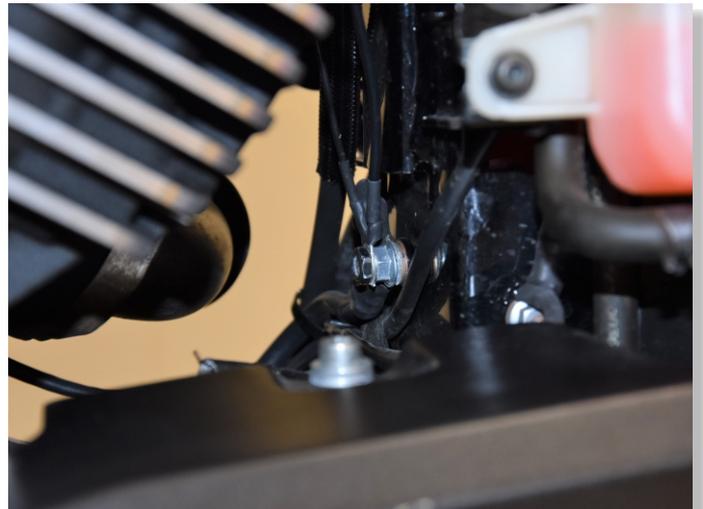

MOUNT THE QSE SENSOR.

(USE THE NEW BOLT AND WASHERS SUPPLIED WITH THE UNIT. MAKE SURE TO PLACE ONE WASHER ABOVE THE SENSOR AND ONE WASHER BELOW THE SENSOR. TIGHTEN THE SCREW BY 5-6 NM.

(WHEN TIGHTENED, DO NOT TRY TO ROTATE THE SENSOR BODY.)

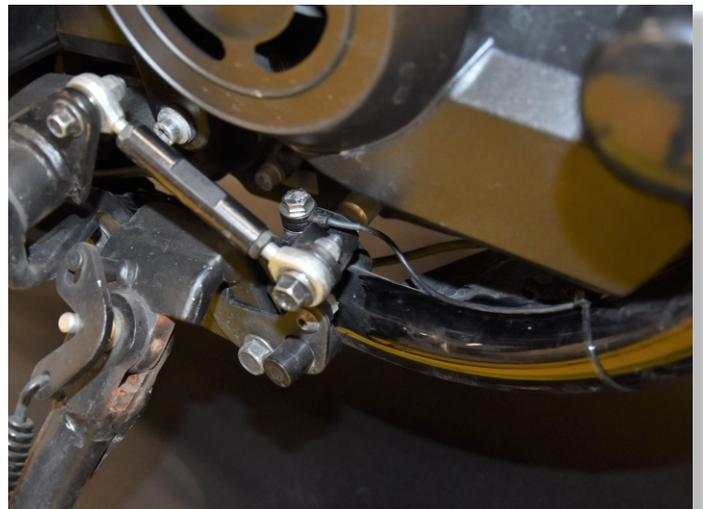

Harley-Davidson Street 750

2014-



SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P1H

TYPICAL POSITION FOR THE
QUICKSHIFTER EASY.

SECURE THE UNIT PROPERLY.

