



SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P2T

REMOVE THE SEAT.




LIFT UP OR REMOVE
THE FUEL TANK.



TAKE OFF THE BLACK/WHITE
TERMINAL FROM ONE COIL.

CONNECT THE QSH GREEN
TERMINAL TO THIS COIL TERMINAL.

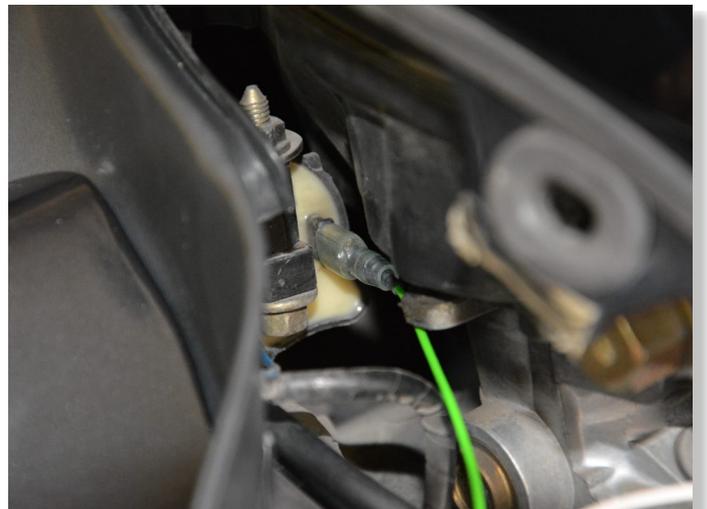

Honda CBR1100XX

2001-2008



**CONNECT THE BLACK/WHITE
TERMINAL TO THE QSH RED WIRE
TERMINAL AND SECURE WITH TAPE.**



**TAKE OFF THE BLACK/WHITE
TERMINAL FROM THE 2ND COIL.**

**CONNECT THE QSH GREEN
TERMINAL TO THIS COIL TERMINAL.**

**ISOLATE THE UNUSED BLACK/WHITE
TERMINAL WITH TAPE.**



**SPLICE THE QSH WHITE WIRE TO
THE YELLOW/BLUE OR BLUE/YELLOW
WIRE OF THE COIL BY USING THE
SUPPLIED RED WIRE TAP
CONNECTOR.**

(REFER TO THE QSH-P2T INSTRUCTIONS)



Honda CBR1100XX

2001-2008



**CONNECT QSH BLACK WIRE
TERMINAL TO CHASSIS GROUND.**



MOUNT THE QSE SENSOR.
(REPLACE THE BOLT WITH THE ONE SUPPLIED.
PLACE THE CONICAL WASHERS AT THE TWO SIDES OF
THE SENSOR LIKE THIS: (O). TIGHTEN THE BOLT IN
THIS POSITION BY ABOUT 5 NM. IF YOU DO NOT HAVE
A TORQUE WRENCH, TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.
FOR DIFFERENT MOUNTING OPTIONS,
REFER TO THE SENSOR INSTALL GUIDE.)



**TYPICAL POSITION FOR THE
QUICKSHIFTER EASY.**

