

Yamaha MT-09 Tracer / FJ-09

2015-



SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4A


REMOVE THE SEATS.
REMOVE THE FAIRINGS.



REMOVE THE FUEL TANK.
REMOVE THE AIRBOX.



PLUG QSH CONNECTORS IN-LINE
WITH THE IGNITION COIL
CONNECTORS.
(BLACK, 2-POLE CONNECTORS BELOW AIRBOX)

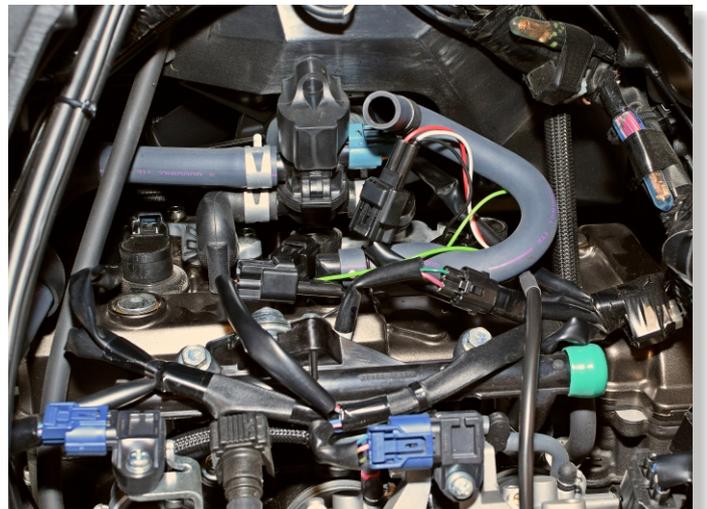

Yamaha MT-09 Tracer / FJ-09

2015-



**CONNECT QSH BLACK WIRE
TERMINAL TO CHASSIS GROUND.**



MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED.
PLACE THE CONICAL WASHERS AT THE TWO SIDES OF
THE SENSOR LIKE THIS: (O). TIGHTEN THE BOLT IN
THIS POSITION BY ABOUT 5-6 NM. IF YOU DO NOT HAVE
A TORQUE WRENCH, TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.)

(FOR DIFFERENT MOUNTING OPTIONS,
REFER TO THE SENSOR INSTALL GUIDE.)



**TYPICAL POSITION FOR THE
QUICKSHIFTER EASY.**

