

Triumph Daytona 675

2006-2012




SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4A


REMOVE THE MAIN SEAT.



REMOVE THE FUEL TANK.

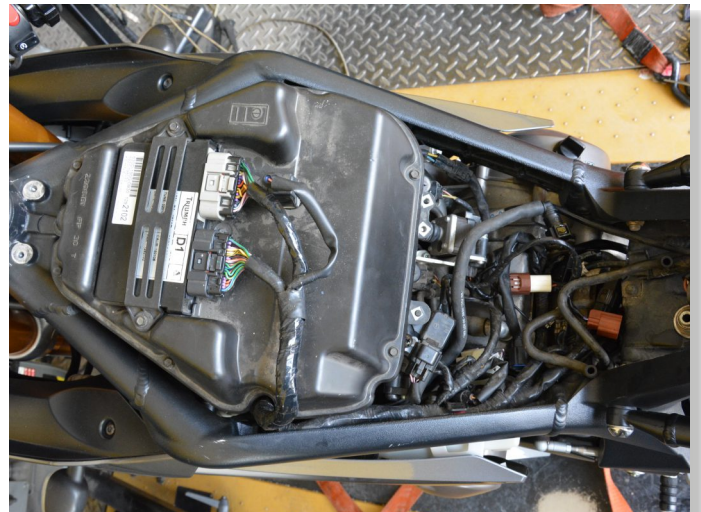

REMOVE THE AIRBOX.

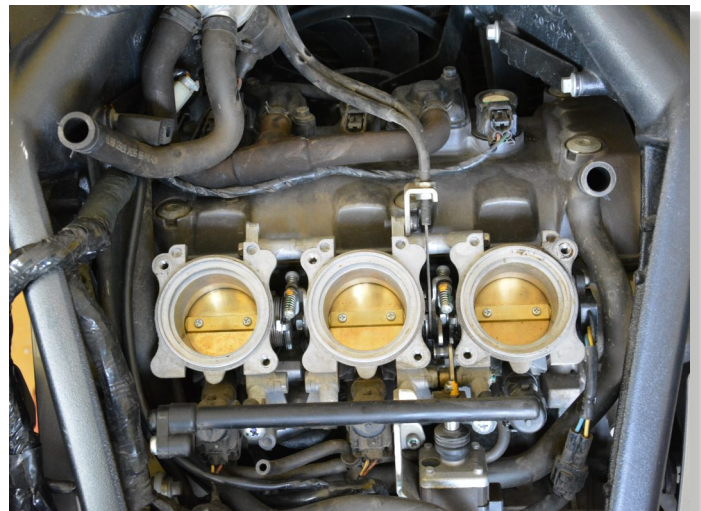

Triumph Daytona 675

2006-2012




PLUG QSH CONNECTORS IN-LINE WITH THE IGNITION COIL CONNECTORS.

(BLACK, 2-POLE CONNECTORS BELOW AIRBOX.)

MAKE SURE THE QSH PLUGS MARKED WITH RED
SQUARE ARE CONNECTED, AND LEAVE ONE COUPLER
(UNUSED)



CONNECT QSH BLACK WIRE TERMINAL TO CHASSIS GROUND.

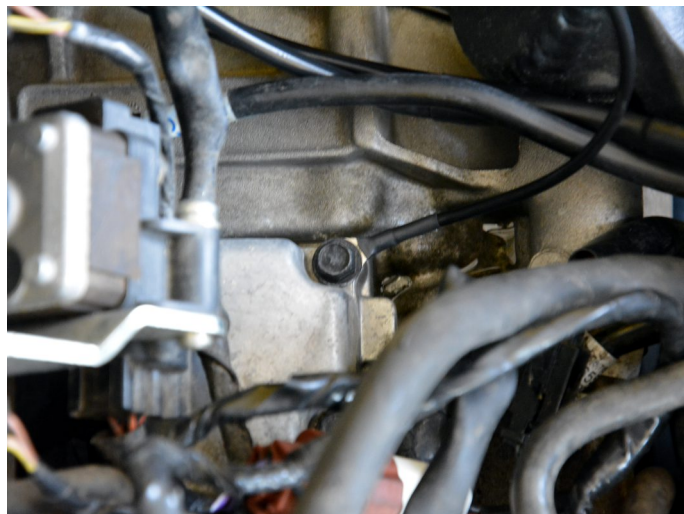

MOUNT THE QSE SENSOR.

(USE THE NEW BOLT AND WASHERS SUPPLIED WITH
THE UNIT. MAKE SURE TO PLACE ONE WASHER ABOVE
THE SENSOR AND ONE WASHER BELOW THE SENSOR.
TIGHTEN THE SCREW BY 5 NM.

WHEN TIGHTENED, DO NOT TRY TO ROTATE THE
SENSOR BODY.)



Triumph Daytona 675

2006-2012



TYPICAL POSITION FOR THE
QUICKSHIFTER EASY.

