

SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P2B

REMOVE THE SEAT.



REMOVE THE TANK COVERS.



LIFT UP OR REMOVE THE FUEL TANK.



Kawasaki ER-6n 2006-2008

PLUG QSH CONNECTORS IN-LINE WITH THE IGNITION COIL CONNECTORS.

(BLACK, Z-POLE CONNECTORS BELOW AIRBOX)




CONNECT QSH BLACK WIRE TERMINAL TO CHASSIS GROUND.



MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED.
PLACE THE CONICAL WASHERS AT THE TWO SIDES OF
THE SENSOR LIKE THIS: (D). TIGHTEN THE BOLT IN
THIS POSITION BY ABOUT 5 NM. IF YOU DO NOT HAVE
A TORQUE WRENCH, TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.

FOR DIFFERENT MOUNTING OPTIONS, REFER TO THE SENSOR INSTALL GUIDE.)

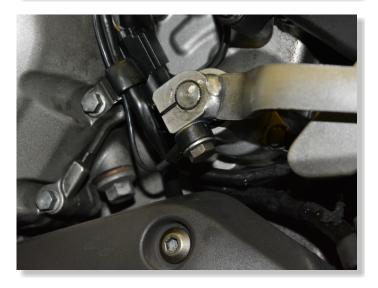







Typical position for the QuickShifter easy.

