



SUPPLEMENTARY MANUAL

for SH-V4-C + SH-U01

REMOVE THE WINDSHIELD.



REMOVE THE BLACK PLASTIC FRONT
FAIRING.



UNPLUG THE DASHBOARD
CONNECTOR.
(GRAY, 20 POLE CONNECTOR BEHIND THE
DASHBOARD.)







SUPPLEMENTARY MANUAL

for SH-V4-C + SH-U01


CUT THE PINK WIRE ABOUT 4CM (1.5") AWAY FROM THE CONNECTOR.

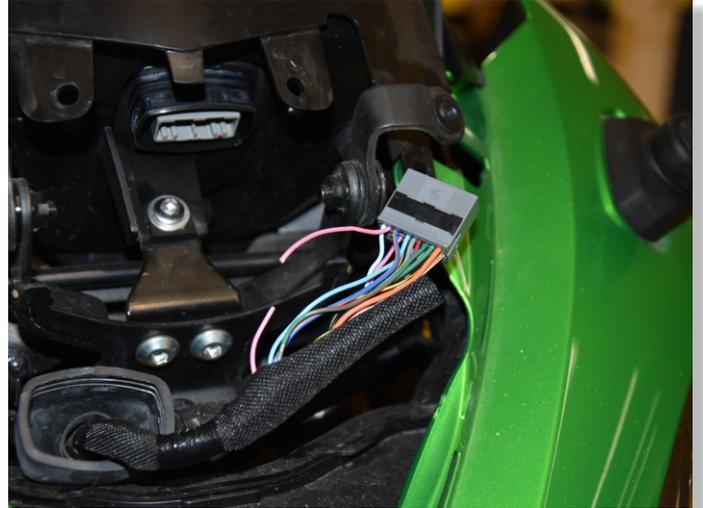

CONNECT THE SPEEDOHEALER WHITE WIRE TO THE PINK WIRE END, WHICH IS AT THE WIRING HARNESS SIDE.

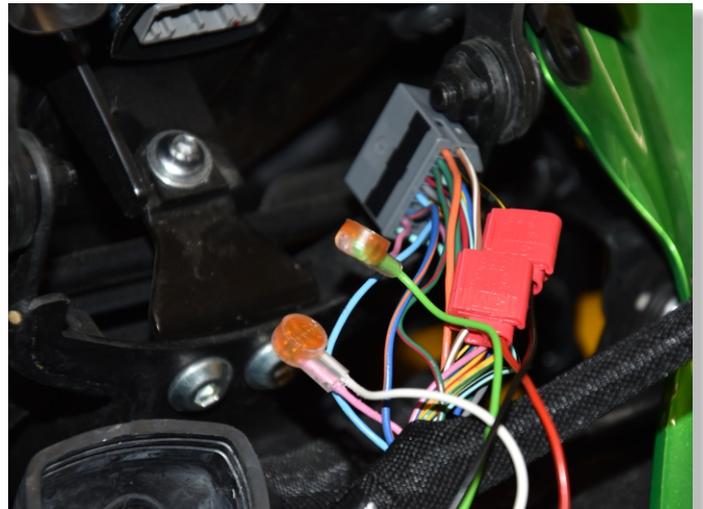

CONNECT THE SPEEDOHEALER GREEN WIRE TO THE PINK WIRE END, WHICH GOES TO THE DASHBOARD CONNECTOR.

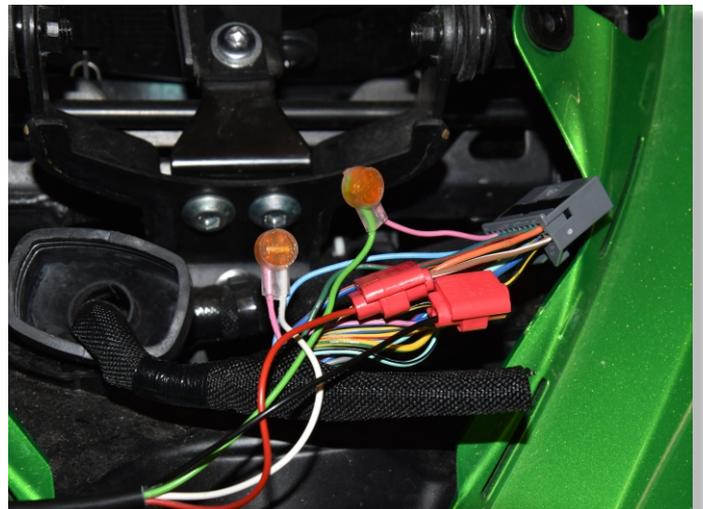

SPLICE THE SPEEDOHEALER RED WIRE TO THE BROWN/WHITE WIRE.

SPLICE THE SPEEDOHEALER BLACK WIRE TO THE BLACK/YELLOW WIRE.

Kawasaki Z1000SX 2017-



SUPPLEMENTARY MANUAL

for SH-V4-C + SH-U01

RECOMMENDED POSITION
FOR SPEEDOHEALER.

SECURE THE UNIT PROPERLY.

