

## SUPPLEMENTARY MANUAL

for SH-UO1


REMOVE THE SEAT.



## UNPLUG THE ECU CONNECTOR. (BLACK CONNECTOR NEXT TO THE BATTERY.)





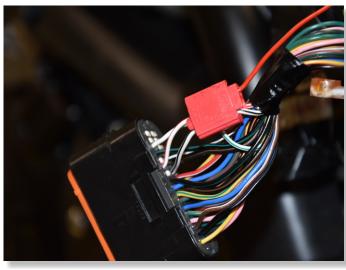



## SUPPLEMENTARY MANUAL

for SH-UO1


CUT THE PINK/WHITE WIRE ABOUT 4CM (1.5") AWAY FROM THE SMALLER ECU CONNECTOR.

SPLICE THE SPEEDOHEALER WHITE WIRE TO THE PINK/WHITE WIRE END, WHICH GOES TO THE ECU CONNECTOR.

SPLICE THE SPEEDOHEALER GREEN WIRE TO THE PINK/WHITE WIRE END, WHICH IS AT THE WIRING HARNESS SIDE.



SPLICE THE SPEEDOHEALER BLACK WIRE TO THE BLACK/WHITE WIRE OF THE SMALLER ECU PLUG.

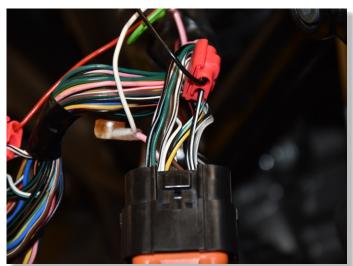

RECOMMENDED POSITION FOR SPEEDOHEALER.

