

Husqvarna FS450

2016-



SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-F2F

SECURE THE BIKE ON A STAND.




LOCATE THE FUEL INJECTOR
CONNECTOR UNDER THE FUEL TANK.



CONNECT THE QSH CONNECTORS
IN-LINE WITH THE INJECTOR
CONNECTORS.

(MAKE SURE THE QSH PLUGS MARKED WITH RED
SQUARE ARE CONNECTED, AND LEAVE THE UNMARKED
COUPLER UNUSED. YOU MAY CONNECT THE MALE AND
FEMALE PLUGS OF THE UNUSED PAIR TOGETHER OR
ISOLATE WITH TAPE.)

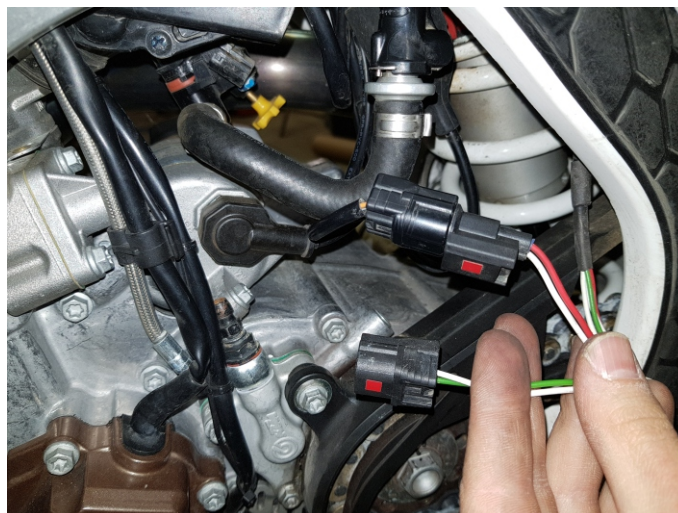

Husqvarna FS450

2016-



SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-F2F

CONNECT THE QSH BLACK WIRE
TERMINAL TO THE BATTERY
NEGATIVE TERMINAL.




USE THE ORIGINAL BOLT OF THE
GEARBOX SHAFT,
ADD THE SENSOR AND THE
ORIGINAL WASHER
EXACTLY AS SHOWN IN THIS PHOTO.



MOUNT THE QSE SENSOR.

(TIGHTEN THE BOLT IN THIS POSITION
BY ABOUT 6 NM. IF YOU DO NOT HAVE
A TORQUE WRENCH, TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.)

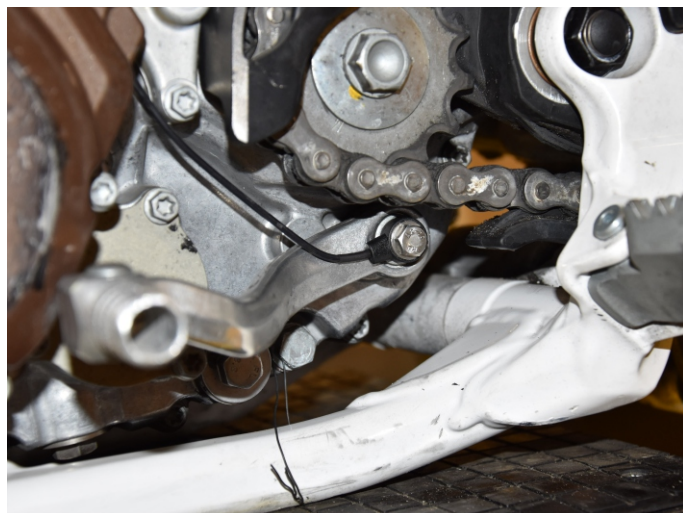

Husqvarna FS450

2016-



SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-F2F

TYPICAL POSITION FOR THE
QUICKSHIFTER EASY.

SECURE THE UNIT PROPERLY.

