




SUPPLEMENTARY MANUAL


for iQSE-1 + QSH-P2A

REMOVE THE MAIN SEAT AND THE
FUEL TANK COVER ON THE RIGHT
SIDE.

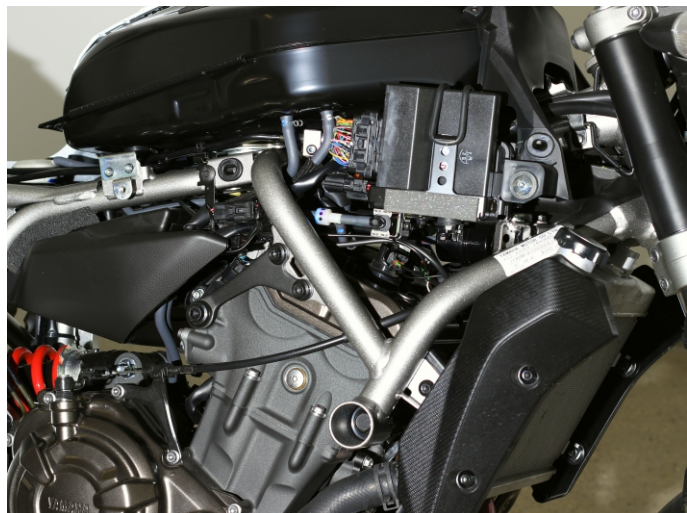

PLUG THE QSH CONNECTORS IN-
LINE WITH THE IGNITION COIL
CONNECTORS.

(BLACK, 2-POLE CONNECTORS BELOW FUEL TANK.)

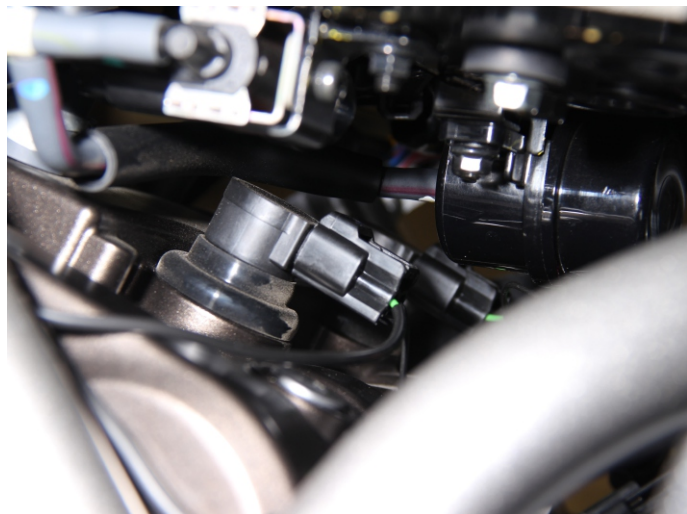

MOUNT THE QSE SENSOR.

(REPLACE THE BOLT WITH THE ONE SUPPLIED. PLACE
THE CONICAL WASHERS AT THE TWO SIDES OF THE
SENSOR LIKE THIS: (O). TIGHTEN THE BOLT IN THIS
POSITION BY ABOUT 5-6 NM. IF YOU DO NOT HAVE
A TORQUE WRENCH, TIGHTEN THE BOLT UNTIL THE
SHIFT ARM IS TIGHT ON THE GEARBOX SHAFT.)





SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P2A

CONNECT THE QSH BLACK WIRE
TERMINAL TO THE CHASSIS
GROUND.



TYPICAL POSITION FOR THE
QUICKSHIFTER EASY.
SECURE THE UNIT PROPERLY.

