

# KTM 1190 RC8 /R

2008-2010



## SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4B

REMOVE THE SEAT.



REMOVE THE  
LEFT AND RIGHT SIDE COVERS  
UNDER THE SEAT.



REMOVE THE FUEL TANK.



# KTM 1190 RC8 /R

2008-2010




## SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4B

REMOVE THE AIRBOX.



CONNECT THE QSH CONNECTORS  
IN-LINE WITH THE IGNITION COIL  
CONNECTORS.

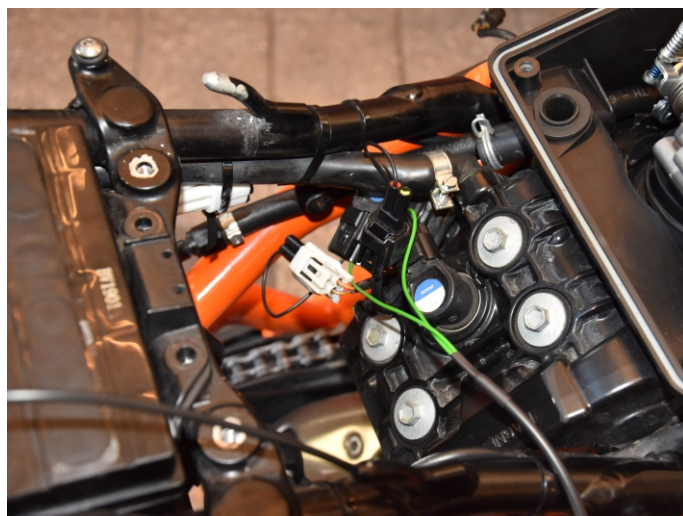

CONNECT THE QSH BLACK WIRE  
TERMINAL TO THE BATTERY  
NEGATIVE TERMINAL.





# KTM 1190 RC8 /R

2008-2010



## SUPPLEMENTARY MANUAL

for iQSE-1 + QSH-P4B

### MOUNT THE QSE SENSOR.

(PLACE THE SENSOR IN THE ROD AS SHOWN.  
USE THE WASHERS SUPPLIED  
AT BOTH SIDES OF THE SENSOR.  
TIGHTEN THE NUT BY HAND FULLY  
AND THEN BY A 1/4 TURN USING A WRENCH.)



TYPICAL POSITION FOR THE  
QUICKSHIFTER EASY.

SECURE THE UNIT PROPERLY.



AN IQSE INSTALL VIDEO IS AVAILABLE [HERE](#).