

Honda CBR1000RR

2008-2011



SUPPLEMENTARY MANUAL

for QSE-1 + QSH-P4B

REMOVE THE FRAME COVERS
BELOW MAIN SEAT.



REMOVE THE MAIN SEAT.



REMOVE THE FUEL TANK COVER.



Honda CBR1000RR


2008-2011




REMOVE THE FUEL TANK.



REMOVE THE AIRBOX.

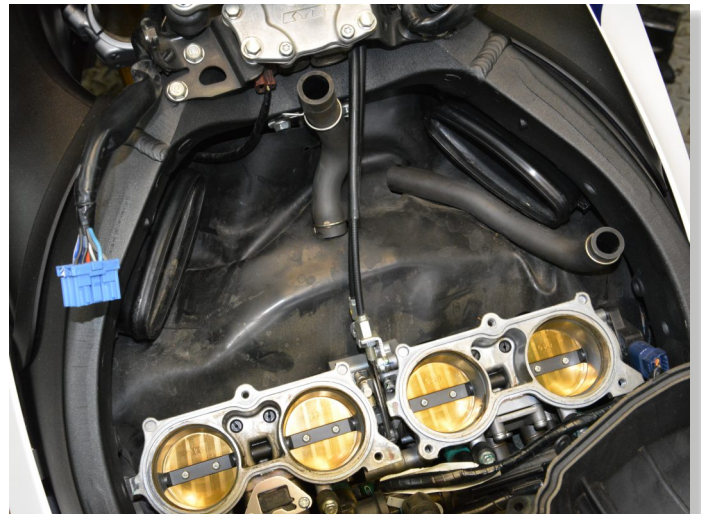

**PLUG QSH CONNECTORS IN-LINE
WITH THE IGNITION COIL
CONNECTORS.**
(WHITE, 2-POLE CONNECTORS BELOW AIRBOX)

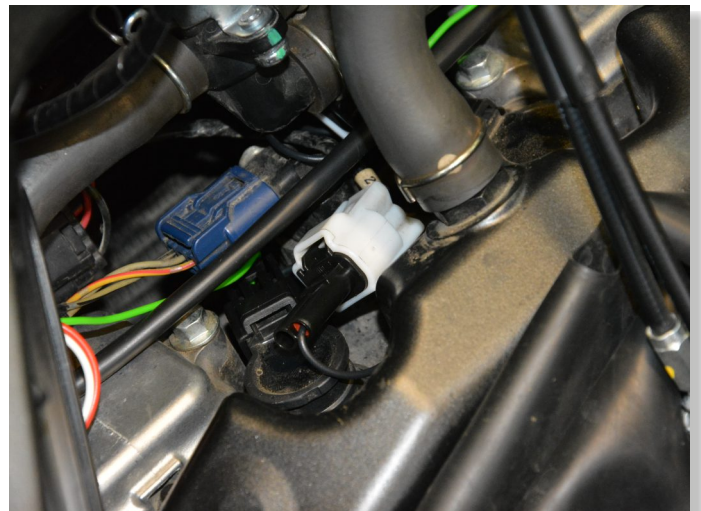


Honda CBR1000RR

2008-2011



**CONNECT QSH BLACK WIRE
TERMINAL TO CHASSIS GROUND.**

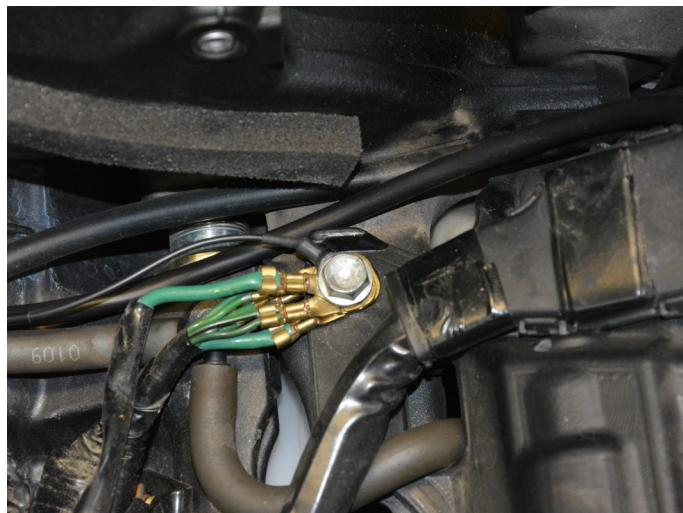

MOUNT THE QSE SENSOR.

(USE THE NEW BOLT AND WASHERS SUPPLIED WITH
THE UNIT. MAKE SURE TO PLACE ONE WASHER ABOVE
THE SENSOR AND ONE WASHER BELOW THE SENSOR.
TIGHTEN THE SCREW BY 7-10 NM.)

WHEN TIGHTENED, DO NOT TRY TO ROTATE THE
SENSOR BODY.)



**TYPICAL POSITION FOR THE
QUICKSHIFTER EASY.**

