

# Ohvale GP-O 190

2019-



## SUPPLEMENTARY MANUAL

for SLP-U01

SECURE THE BIKE ON A STAND.



REMOVE THE SIDE FAIRINGS.



LOCATE THE 4-POLE PLUG OF THE  
ALTERNATOR.  
CONNECT THE GIPRO BLACK/GREEN  
WIRE TO THE BLUE/WHITE BIKE WIRE.

NOTE: IF YOU HAVEN'T INSTALLED  
AN IQSE-2 + QSH-OV1 HARNESS  
KIT YET, YOU NEED TO MAKE A  
GROUND CONNECTION BETWEEN THE  
ENGINE AND THE IGNITION COIL'S  
GROUND TERMINAL.






# **SUPPLEMENTARY MANUAL**

for SLP-U01

CONNECT THE QSH RED WIRE TO  
THE BATTERY POSITIVE TERMINAL  
VIA AN ON/OFF SWITCH.

CONNECT THE QSH BLACK WIRE TO  
THE BATTERY NEGATIVE TERMINAL.

(WE RECOMMEND USING TWO QUICK  
CONNECT TERMINAL BLOCKS AS  
SHOWN ON THE PHOTO.)

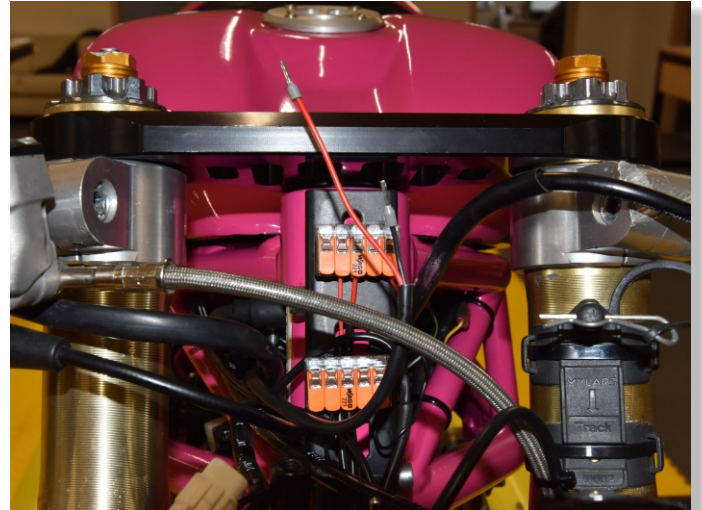

TYPICAL POSITION FOR THE  
SHIFT LIGHT.

SECURE THE UNIT PROPERLY.

