

Suzuki GSX-S1000

2017-2018




SUPPLEMENTARY MANUAL

for XT-S01


REMOVE THE
MAIN AND PASSANGER SEAT.



REMOVE THE SIDE COVERS
FROM FUEL TANK.

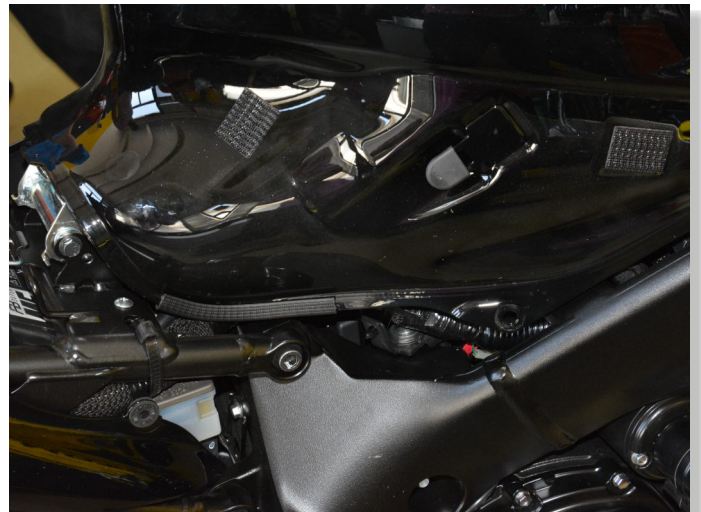

REMOVE THE
SIDE FAIRING COVERS.

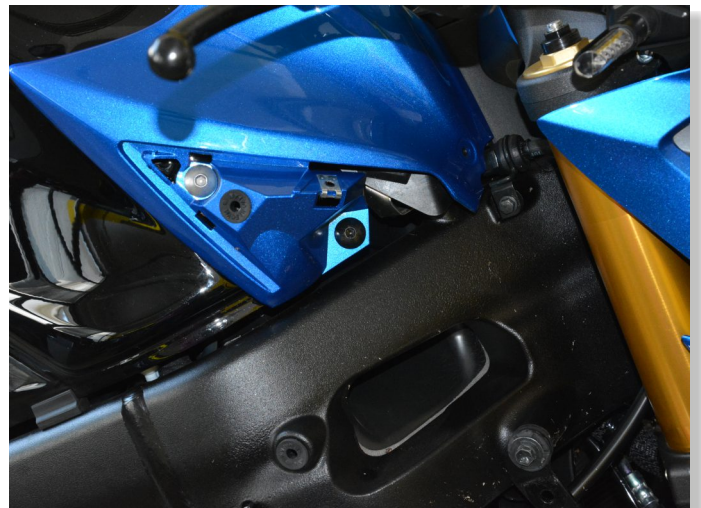

Suzuki GSX-S1000


2017-2018




REMOVE THE COVER
FROM FRONT OF THE FUEL TANK.



REMOVE THE
IGNITION SWITCH COVER.

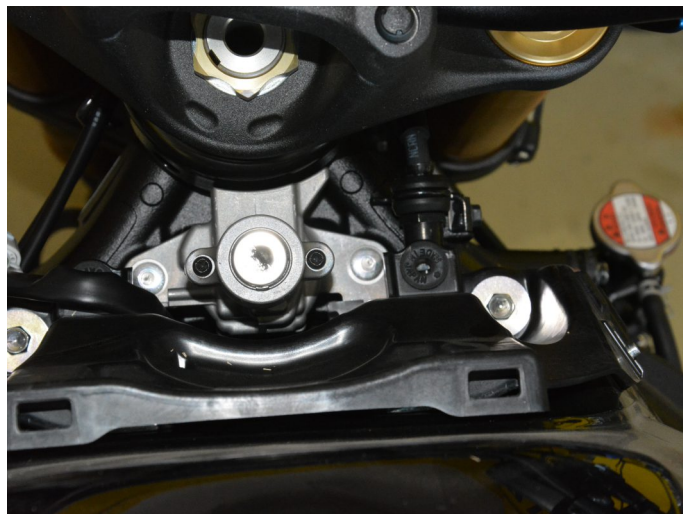

REMOVE THE FUEL TANK.

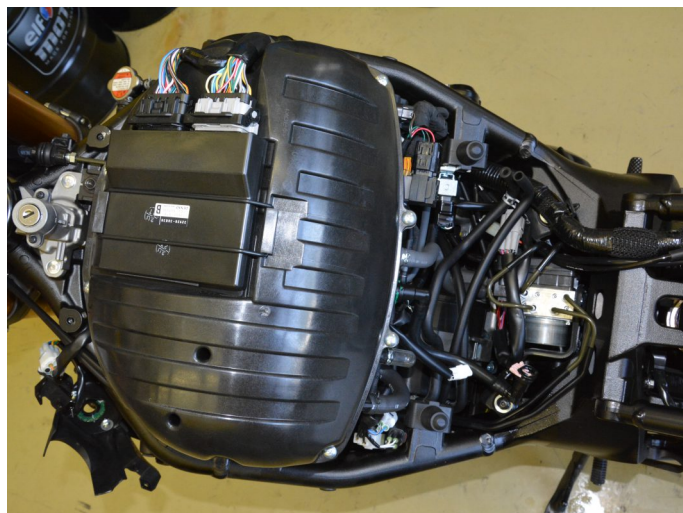


Suzuki GSX-S1000

2017-2018



**PLUG X-TRE CONNECTORS IN-LINE
WITH THE GEAR POSITION SENSOR
CONNECTORS.**

(WHITE, 3-POLE TRIANGULAR CONNECTORS
BELOW THE FUEL TANK AT LEFT SIDE)

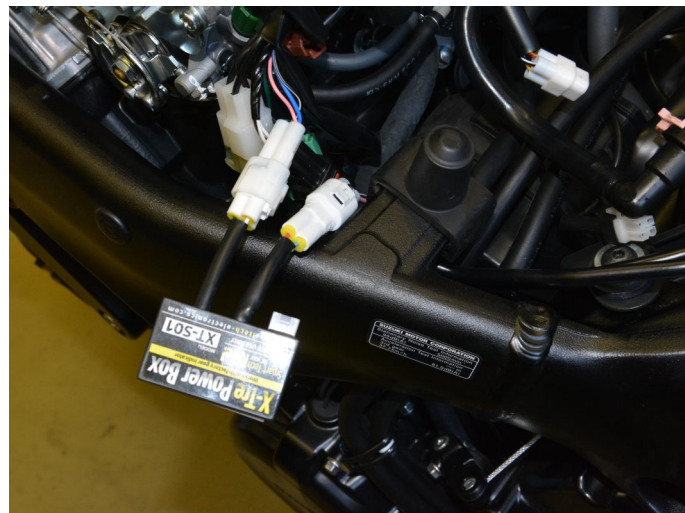


**MOUNT THE X-TRE BOX TO THE
INNER SIDE OF THE FRAME BY THE
SUPPLIED VELCRO STRIPS,
AND SECURE THE BOX AND CABLES
WITH CABLE TIES.**



**CUT THE BLACK/GREEN WIRE ABOUT
4CM (1.6") AWAY FROM THE ECM
CONNECTOR.**

(BLACK CONNECTOR, PIN #14)

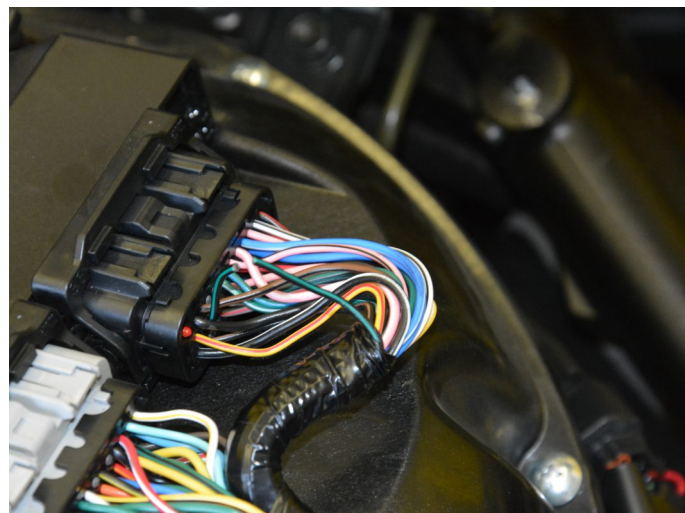


Suzuki GSX-S1000

2017-2018



CONNECT THE X-TRE BLACK/GREEN WIRE TO BLACK/GREEN WIRE END, WHICH GOES TO THE ECU/ECM CONNECTOR.

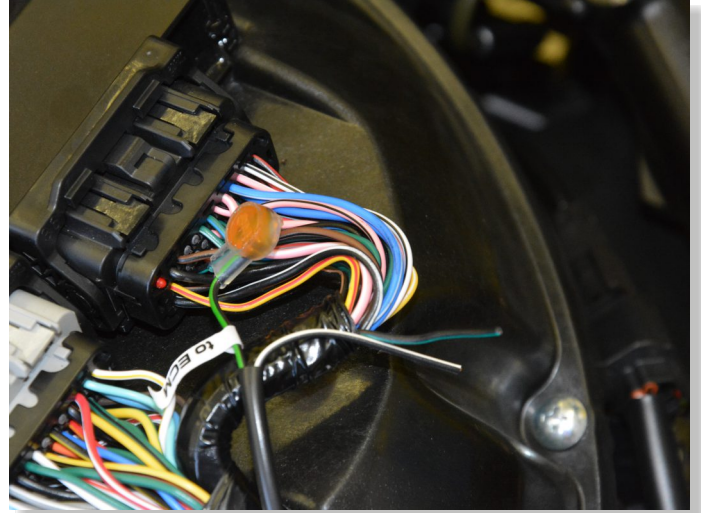

CONNECT THE X-TRE BLACK/WHITE WIRE TO BLACK/GREEN WIRE END, WHICH IS AT THE WIRING HARNESS SIDE.



CONNECT X-TRE RED WIRE TO ORANGE WIRE OF REAR BRAKE LIGHT SWITCH CONNECTOR.

(TRANSPARENT, 2-POLE CONNECTOR BELOW FUEL TANK)

(X-TRE MODE: 4)

