

SUPPLEMENTARY MANUAL

for XT-SO1

REMOVE THE MAIN SEAT.




REMOVE THE
BLACK FUEL TANK COVERS.
LIFT UP OR REMOVE THE
FUEL TANK.



PLUG X-TRE CONNECTORS IN-LINE WITH THE GEAR POSITION SENSOR CONNECTORS.

(WHITE, 3-POLE TRIANGULAR CONNECTORS BELOW THE FUEL TANK AT LEFT SIDE)

MOUNT THE X-TRE BOX TO THE INNER SIDE OF THE FRAME BY THE SUPPLIED VELCRO STRIPS, AND SECURE THE BOX AND CABLES WITH CABLE TIES.

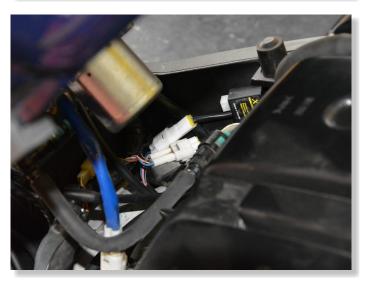



CUT THE BLACK/GREEN WIRE ABOUT 4CM (1.6") AWAY FROM THE ECM CONNECTOR.

(BLACK CONNECTOR, PIN #6)

CONNECT THE X-TRE BLACK/GREEN WIRE TO BLACK/GREEN WIRE END,
WHICH GOES TO THE ECM
CONNECTOR.

CONNECT THE X-TRE BLACK/WHITE WIRE TO BLACK/GREEN WIRE END, WHICH IS AT THE WIRING HARNESS SIDE.



CONNECT X-TRE RED WIRE TO ORANGE/GREEN WIRE OF REAR BRAKE LIGHT SWITCH CONNECTOR.

(TRANSPARENT, 2-POLE CONNECTOR BELOW FUEL TANK)

(X-TRE MODE: 6)

