



SUPPLEMENTARY MANUAL

for GPX-U01


REMOVE THE MAIN SEAT.



LIFT UP OR REMOVE
THE FUEL TANK.



REMOVE THE
RIGHT SIDE FAIRING.

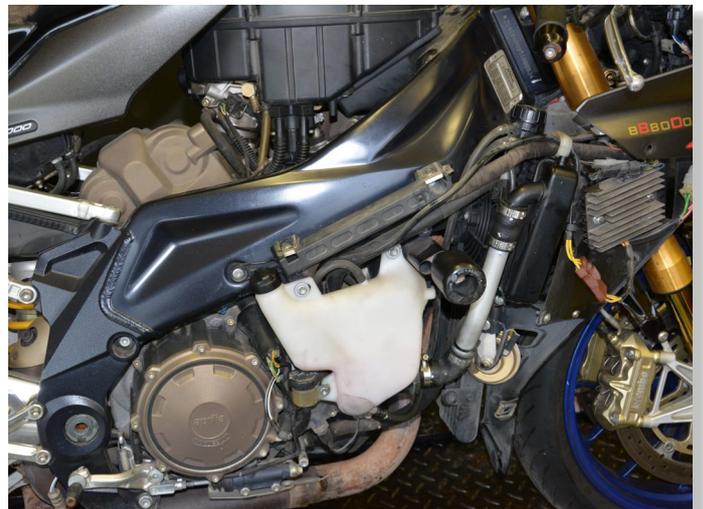


Aprilia RSV1000R


2004-2010



**LOCATE THE SPEED SENSOR CONNECTOR.
ROUTE THE GPX CABLE THROUGH THE TOP OPENING OF THE DUST BOOT.**

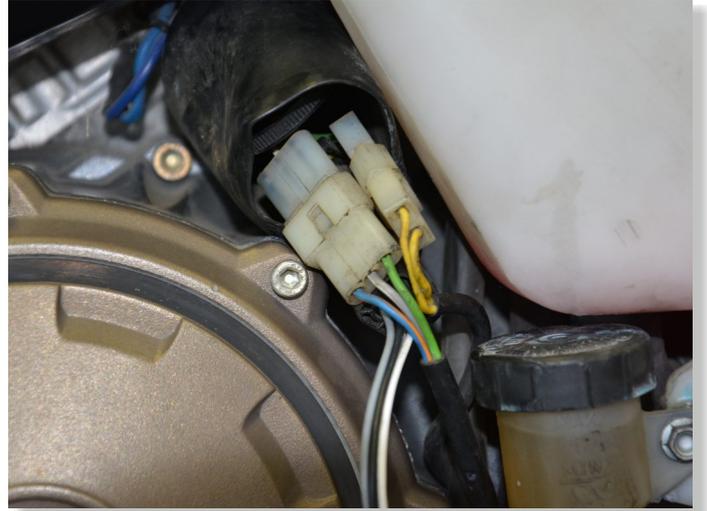

CONNECT GPX RED WIRE TO RED WIRE OF SPEED SENSOR CONNECTOR.
(TRANSPARENT, 3-POLE CONNECTOR IN DUST BOOT BEHIND WATER RESERVOIR TANK)

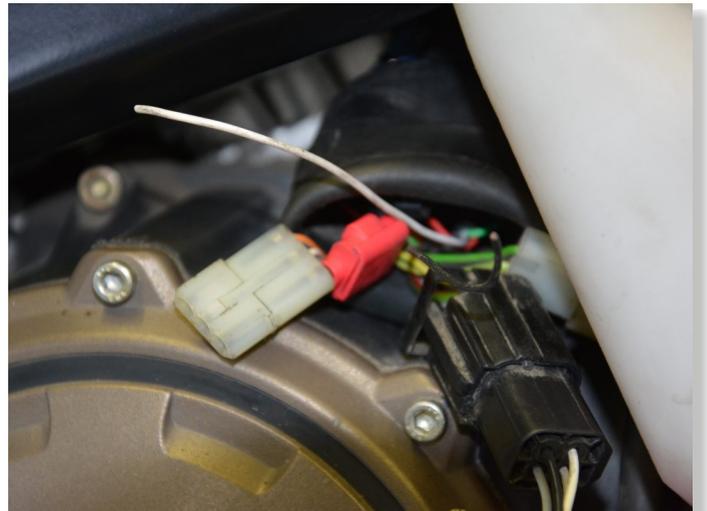

CONNECT GPX WHITE WIRE TO GRAY/WHITE WIRE OF SPEED SENSOR CONNECTOR.
(TRANSPARENT, 3-POLE CONNECTOR IN DUST BOOT BEHIND WATER RESERVOIR TANK)




Aprilia RSV1000R

2004-2010



**CONNECT GPX BLACK WIRE TO
BLUE/ORANGE WIRE OF
SPEED SENSOR CONNECTOR.**
(TRANSPARENT, 3-POLE CONNECTOR IN DUST BOOT
BEHIND WATER RESERVOIR TANK)

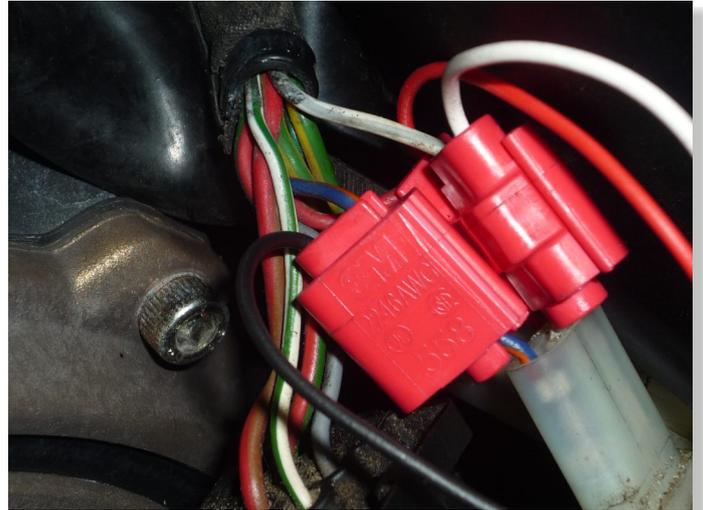

**CONNECT GPX GREEN WIRE TO
BLUE/YELLOW WIRE OF CAMSHAFT
POSITION SENSOR CONNECTOR.**
(BLACK, 3-POLE CONNECTOR
ON CYLINDER HEAD AT THE LEFT)



**TYPICAL POSITION FOR THE
GEAR INDICATOR.**

