




SUPPLEMENTARY MANUAL

for BLP-UO4

REMOVE THE SEATS.



LOCATE THE REAR LIGHT ASSEMBLY CONNECTOR. (Black, 3-pole connector, next to the diagnostic port)

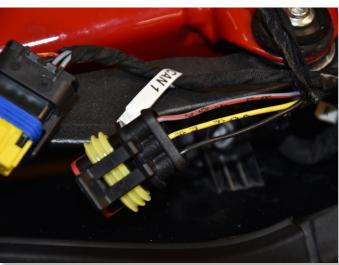



CONNECT THE BLP BLACK WIRE TO THE BLACK WIRE.

CUT THE GRAY/RED WIRE.

CONNECT THE BLP RED WIRE TO THE GRAY/RED WIRE END, WHICH GOES TO THE BIKE WIRING HARNESS SIDE.

CONNECT THE BLP GREEN WIRE TO THE GRAY/RED WIRE END, WHICH GOES TO THE REAR LIGHT ASSEMBLY.





SUPPLEMENTARY MANUAL

for BLP-UO4

TYPICAL POSITION FOR BRAKE LIGHT PRO.

SECURE THE UNIT PROPERLY.

